



Ground points
b = Located on surge tank
c = Located in J/B No. 1
e = LHD, Located under right front pillar
f = Located on center of back panel (S/D)
g = Located under right quarter panel (W/G)




Ground points
 a = LHD: Located on right front fender
 b = Located on surge tank
 d = LHD: Located under left front pillar
 RHD: Located under right front pillar

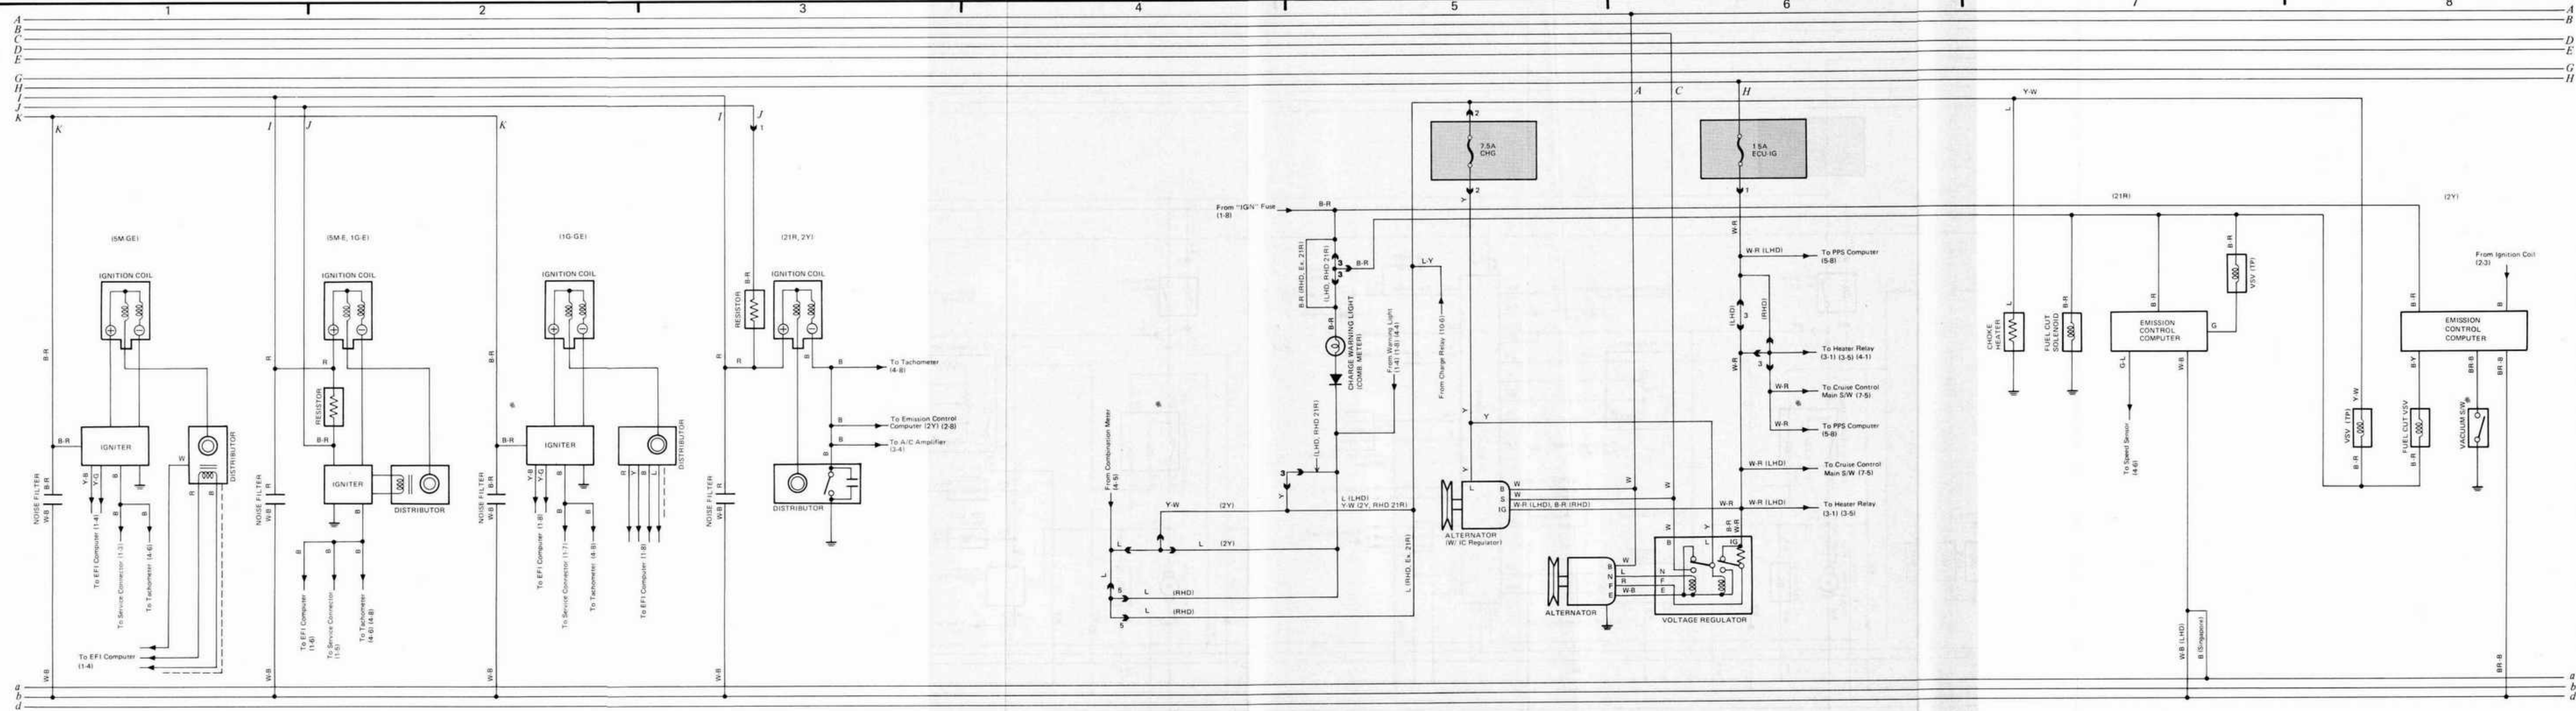

Air Conditioner, Cooler and Heater

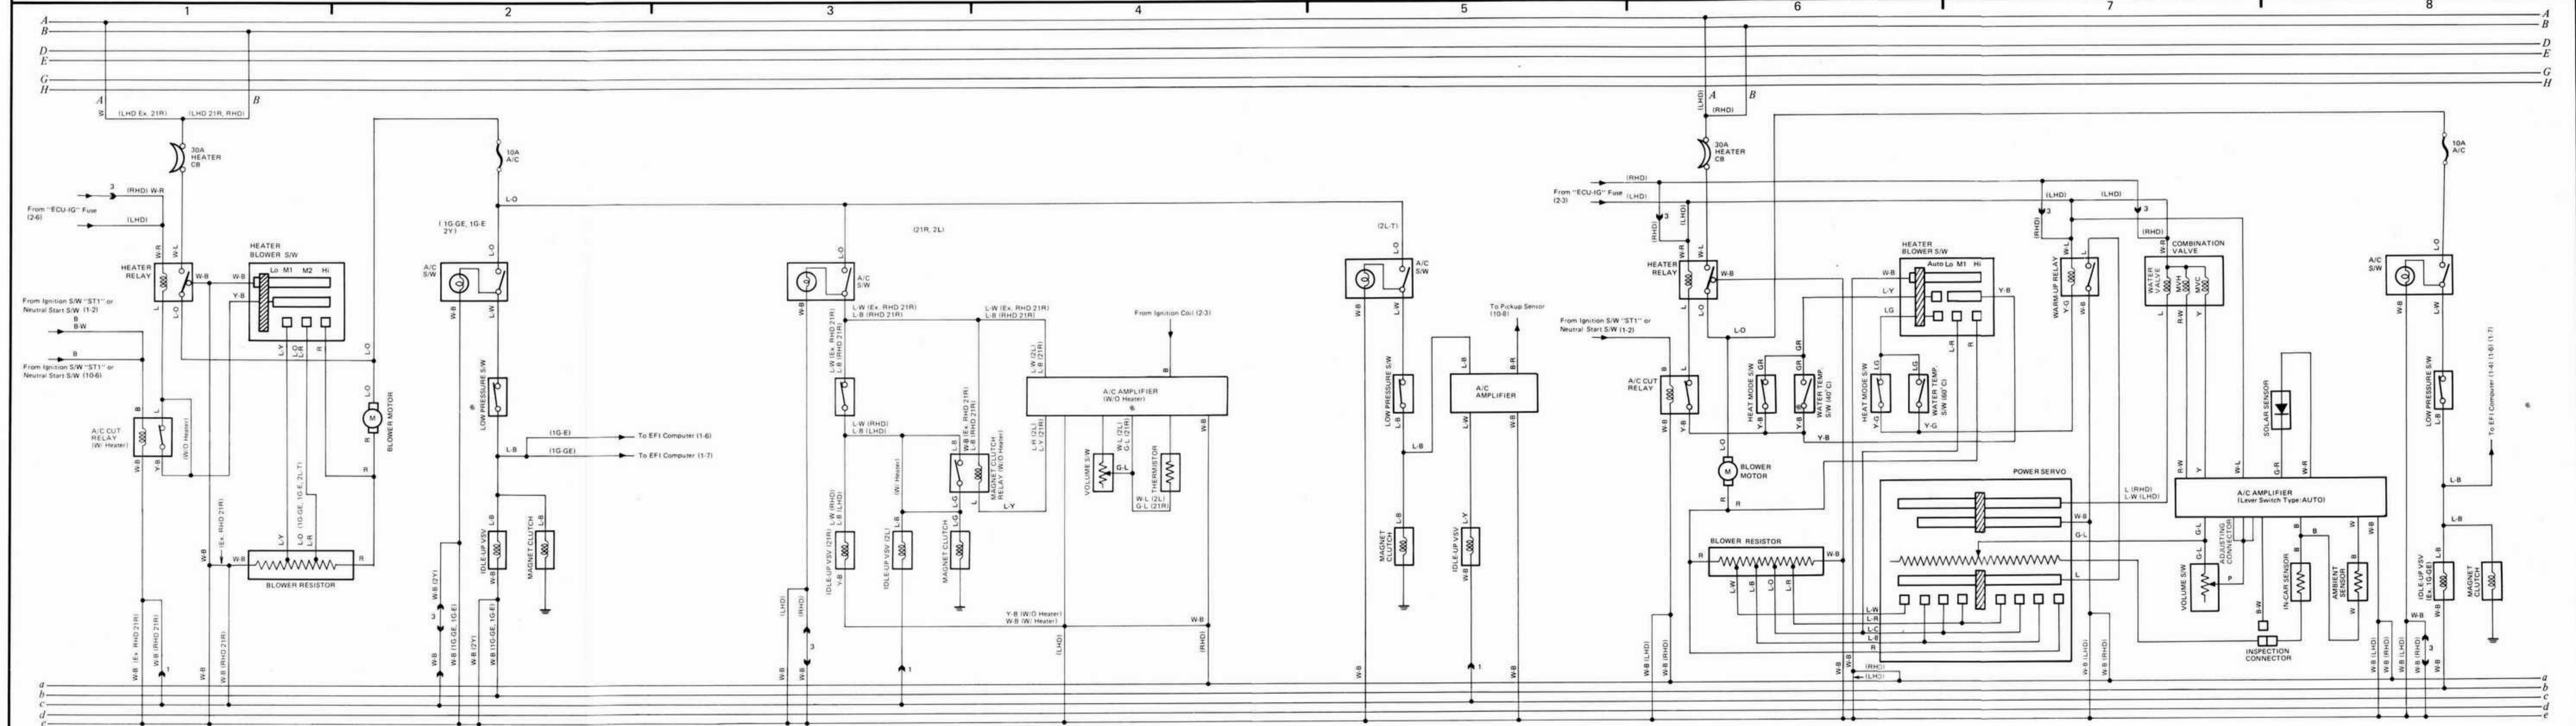

Ground points a = LHD: Located on right front fender
 b = Located on surge tank
 c = Located in J/B No. 1
 d = LHD: Located under left front pillar
 RHD: Located under right front pillar
 e = LHD: Located under right front pillar
 RHD: Located under left front pillar

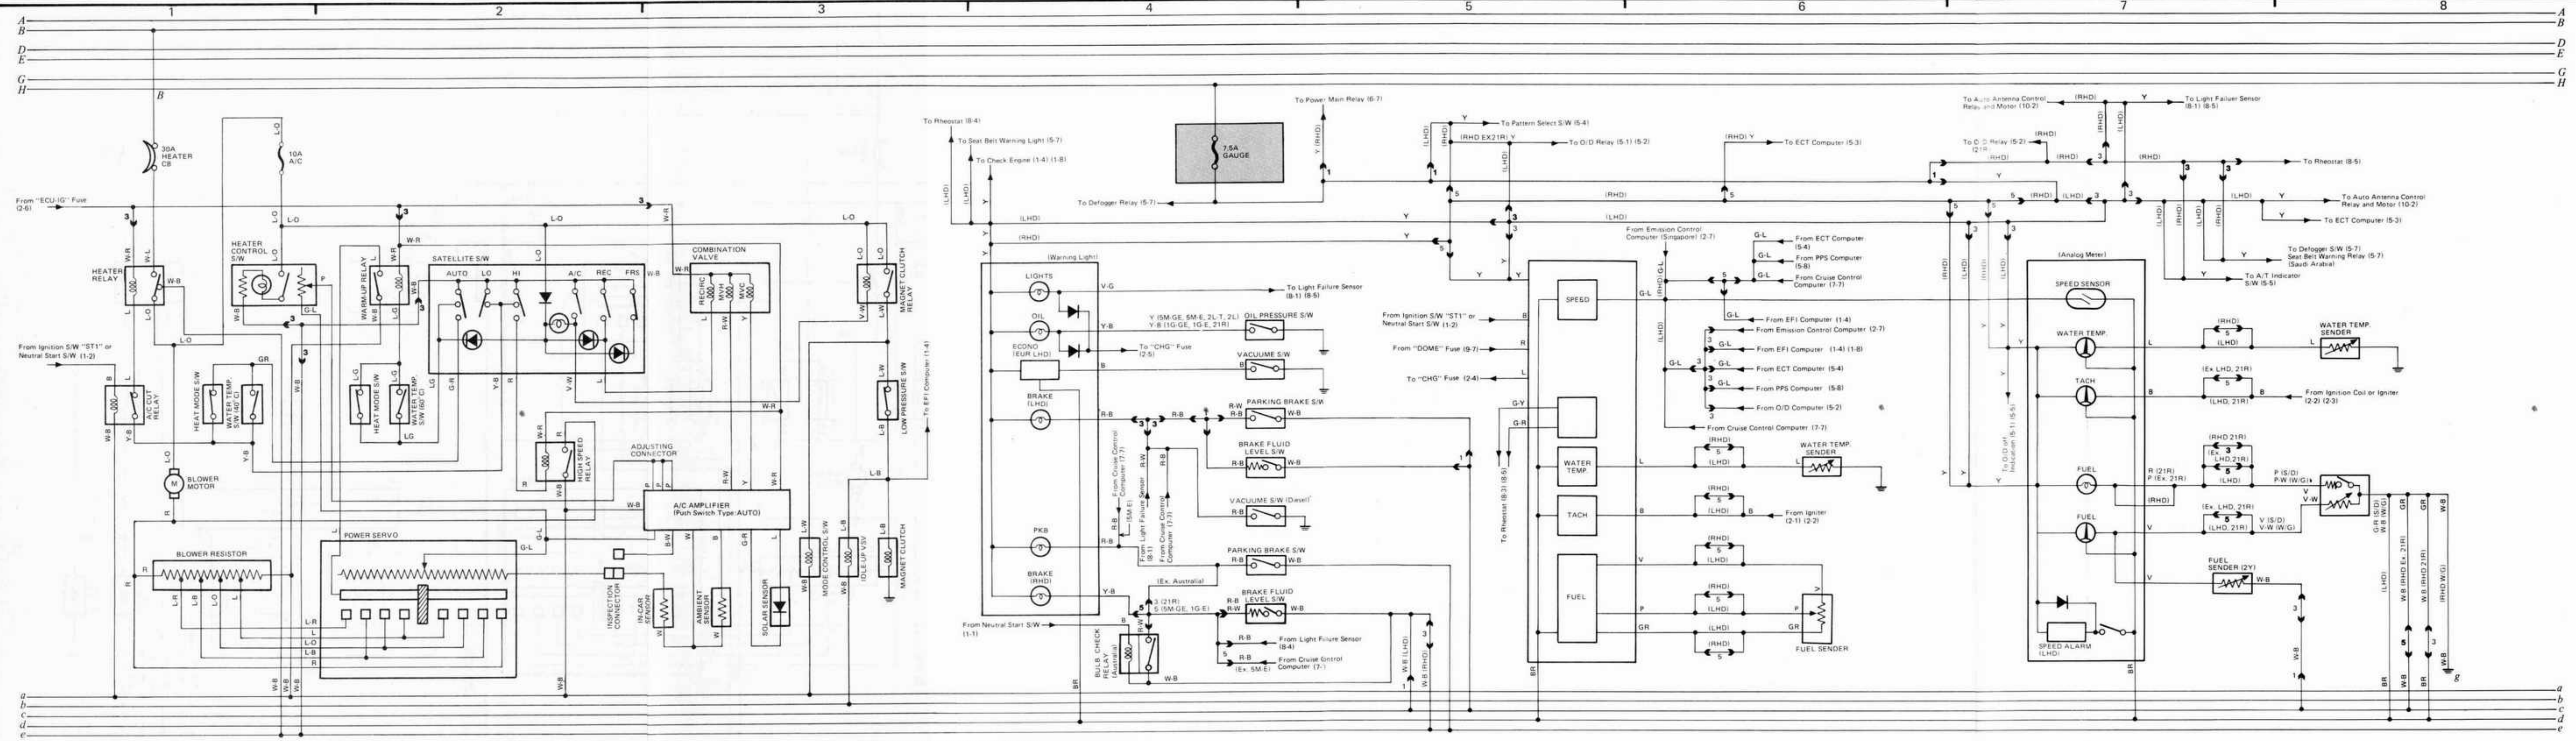

Ground points a = LHD: Located on right front fender; b = Located on surge tank; c = Located in J/B No. 1; d = LHD: Located under left front pillar; RHD: Located under right front pillar; e = LHD: Located under right front pillar; RHD: Located under left front pillar; f = Located in inner panel near right rear combination light (W/G)



Power Windows




Door Locks



Cruise Control



Stop Lights

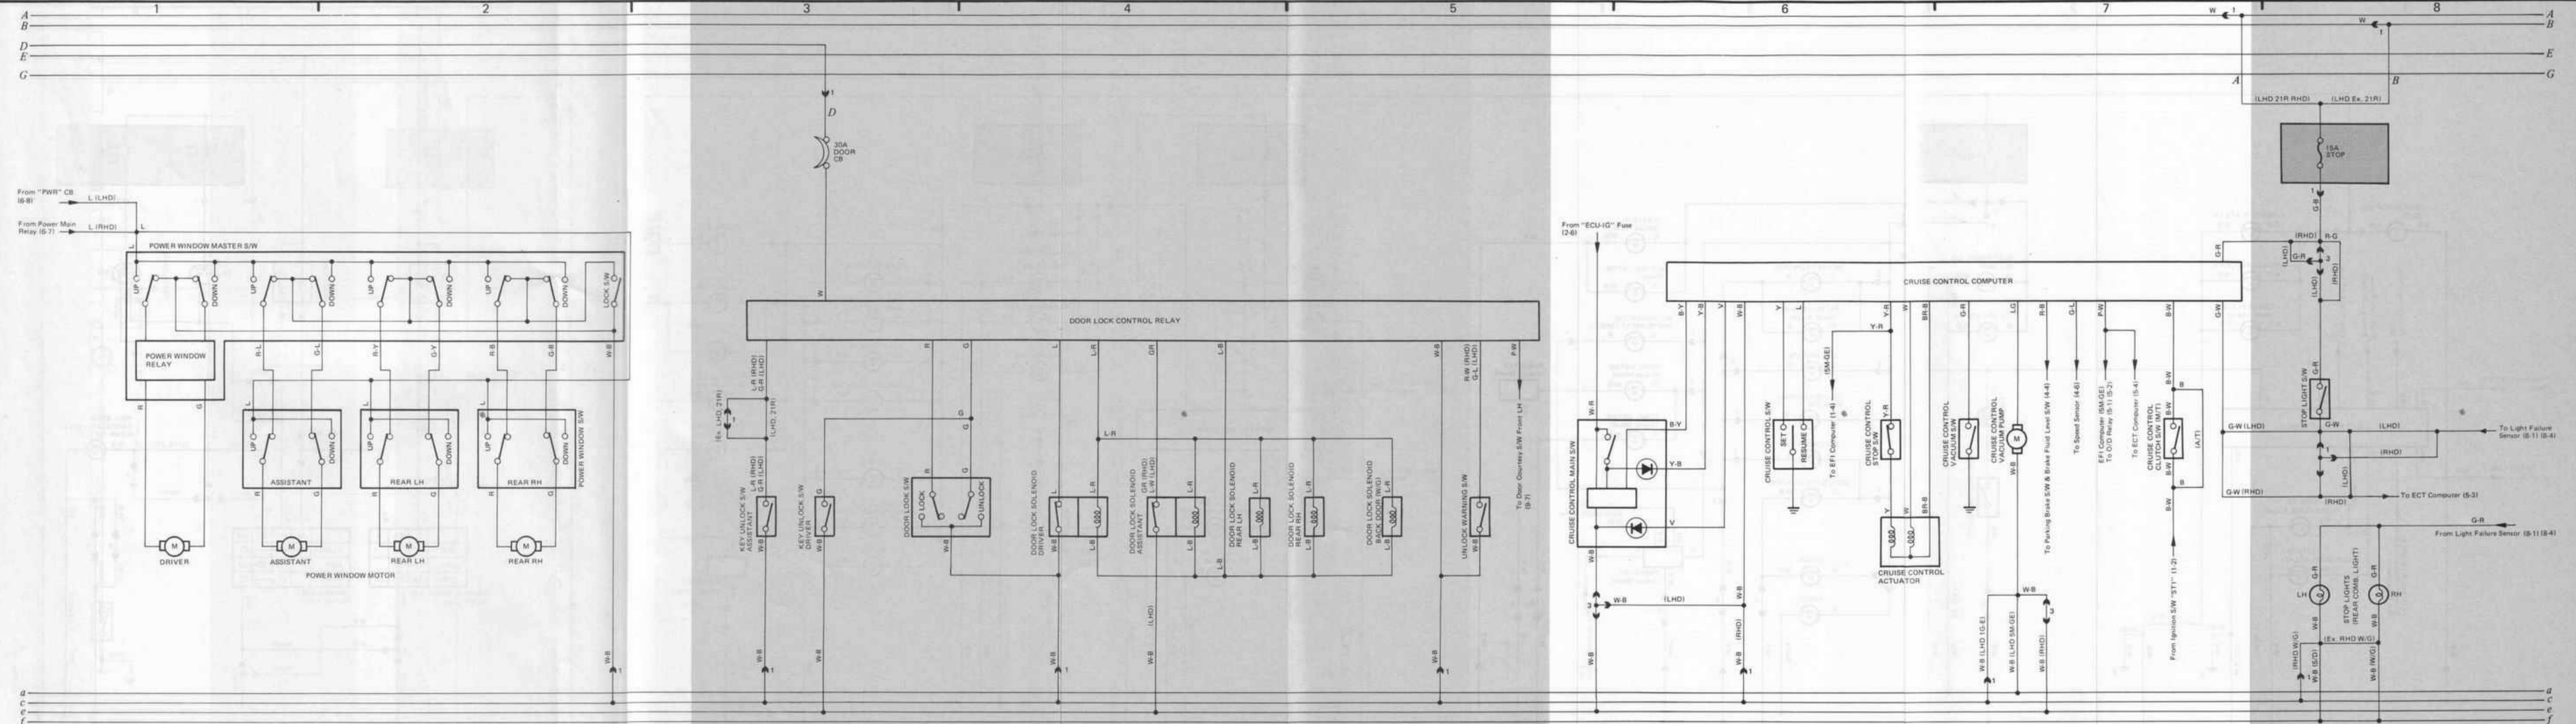


Ground points

a = LHD: Located on right front fender
 c = Located in 2/B No. 1
 e = LHD: Located under right front pillar
 RHD: Located under left front pillar
 f = Located on center of back panel (5/D)





Taillights and Illumination (LHD)

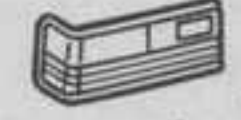

Taillights and Illumination (RHD)








Headlights (Ex. Saudi Arabia, LHD GEN 21R 1G-E)

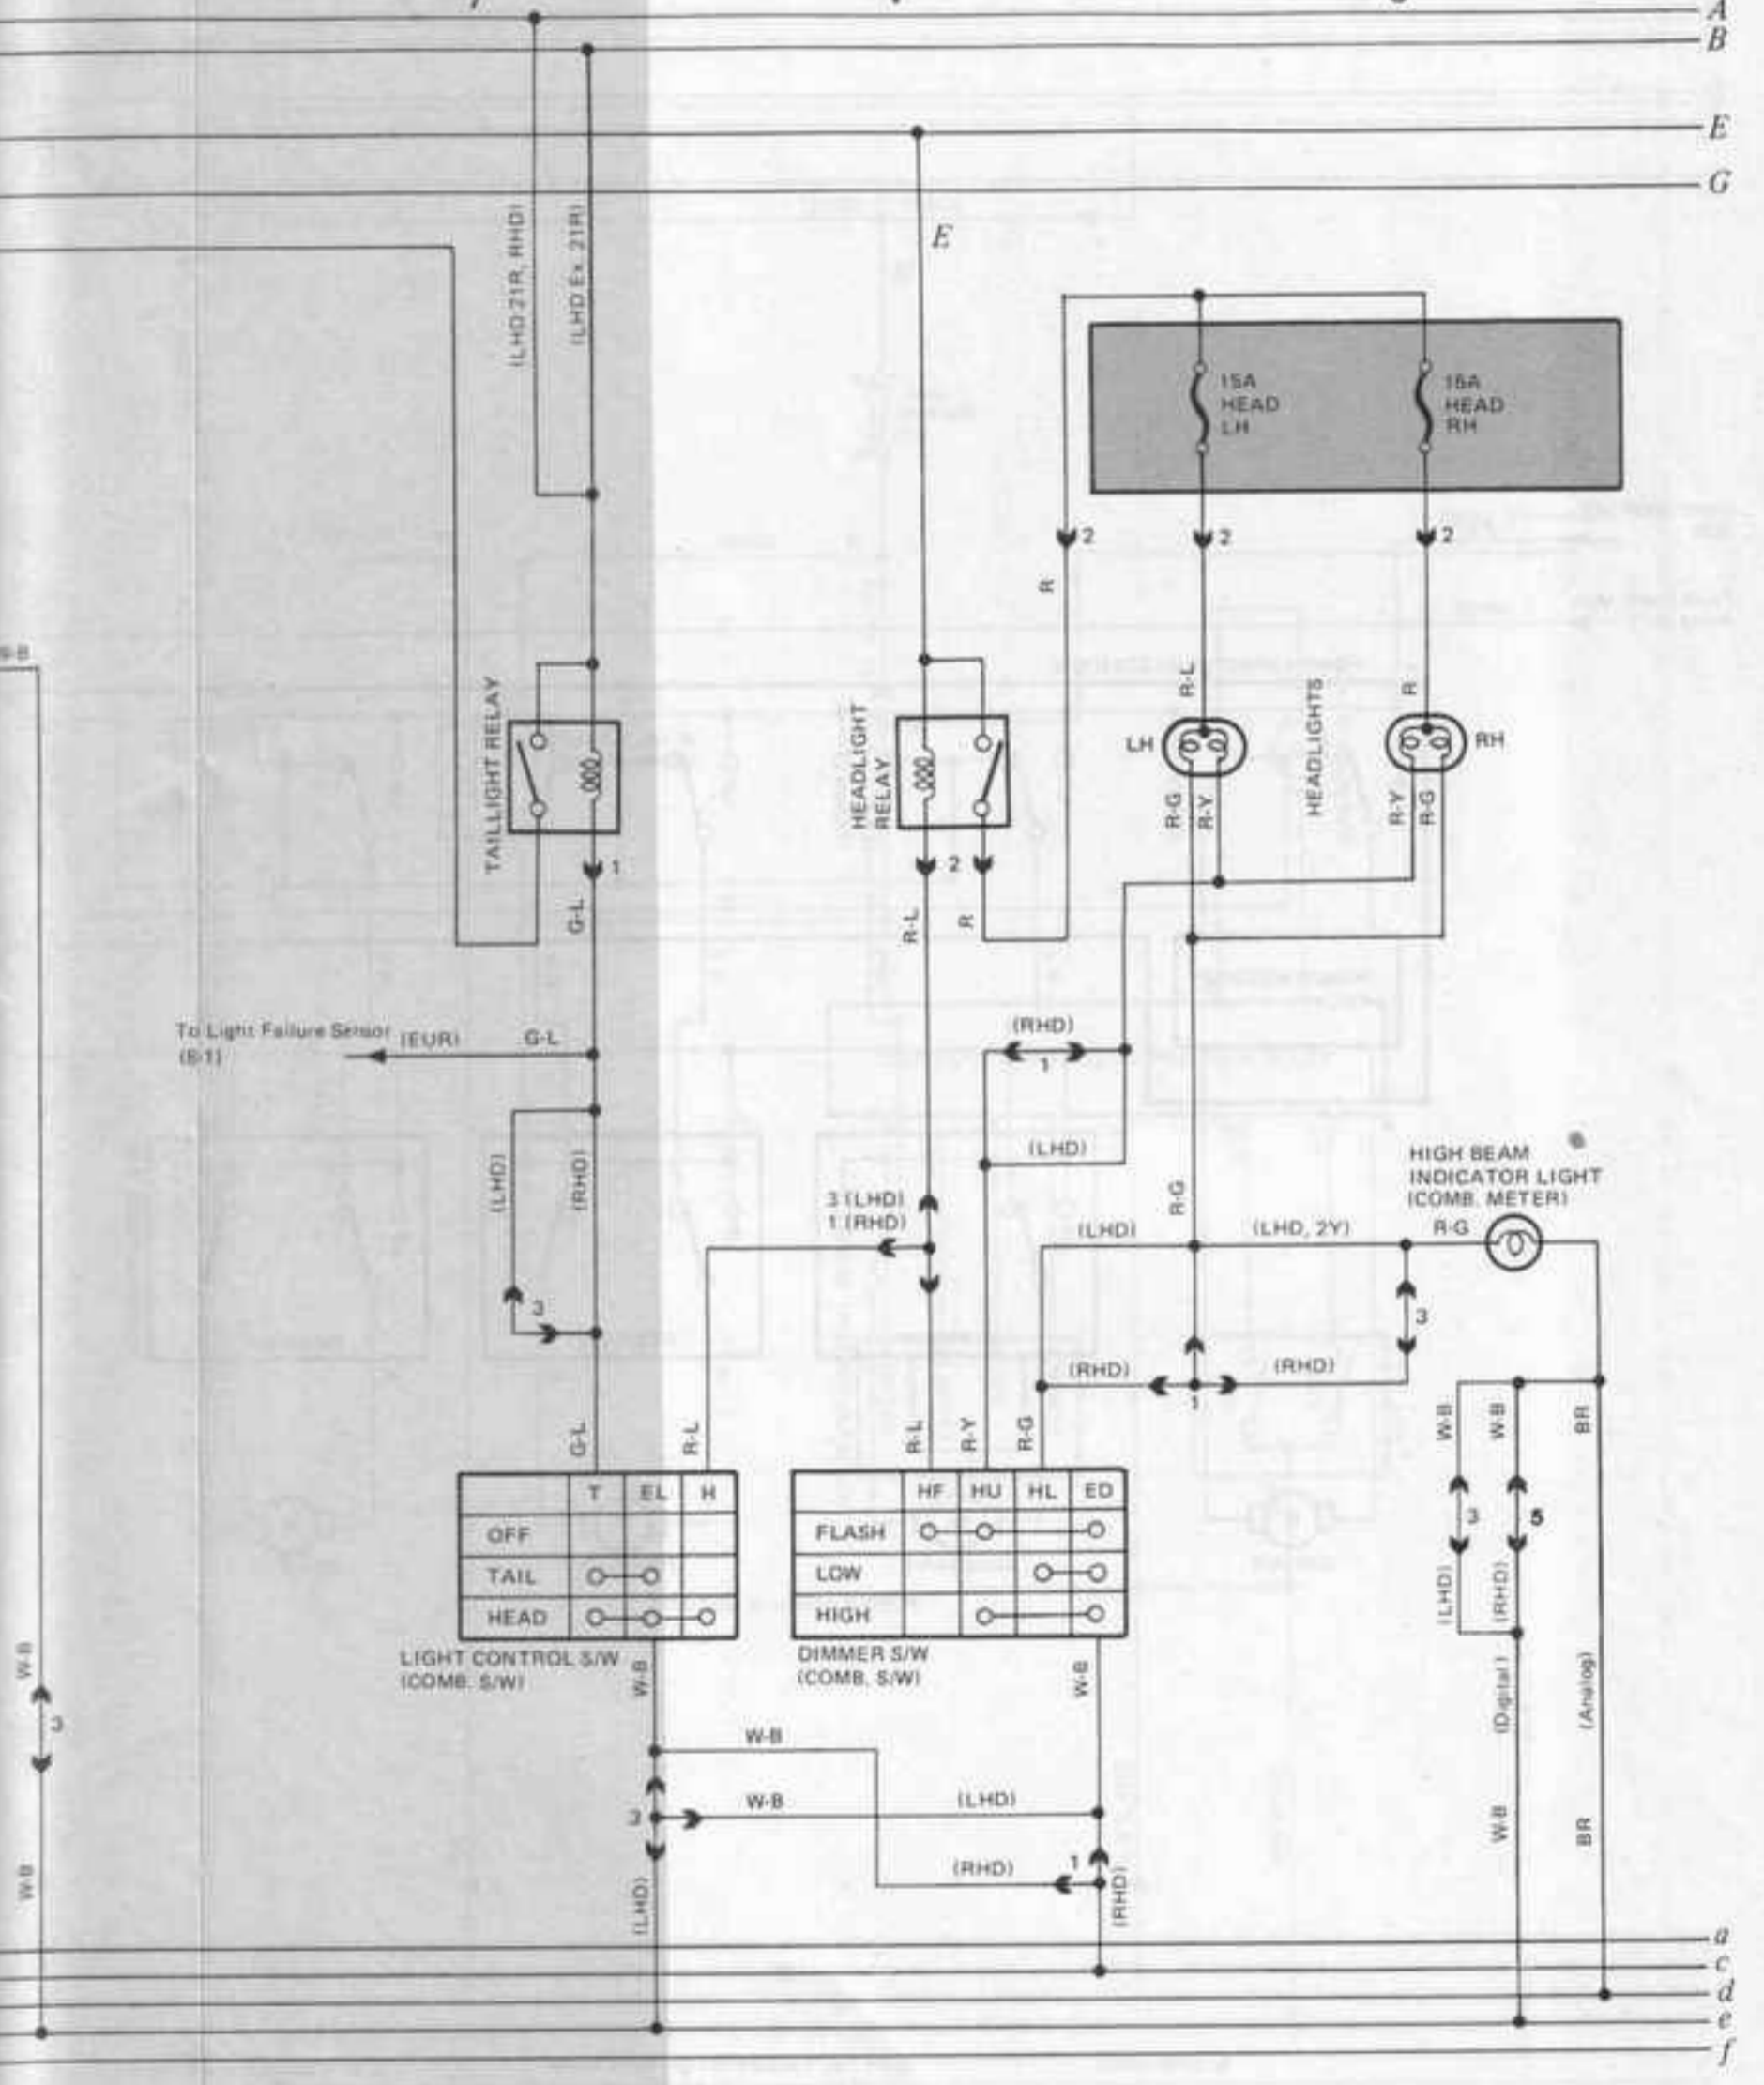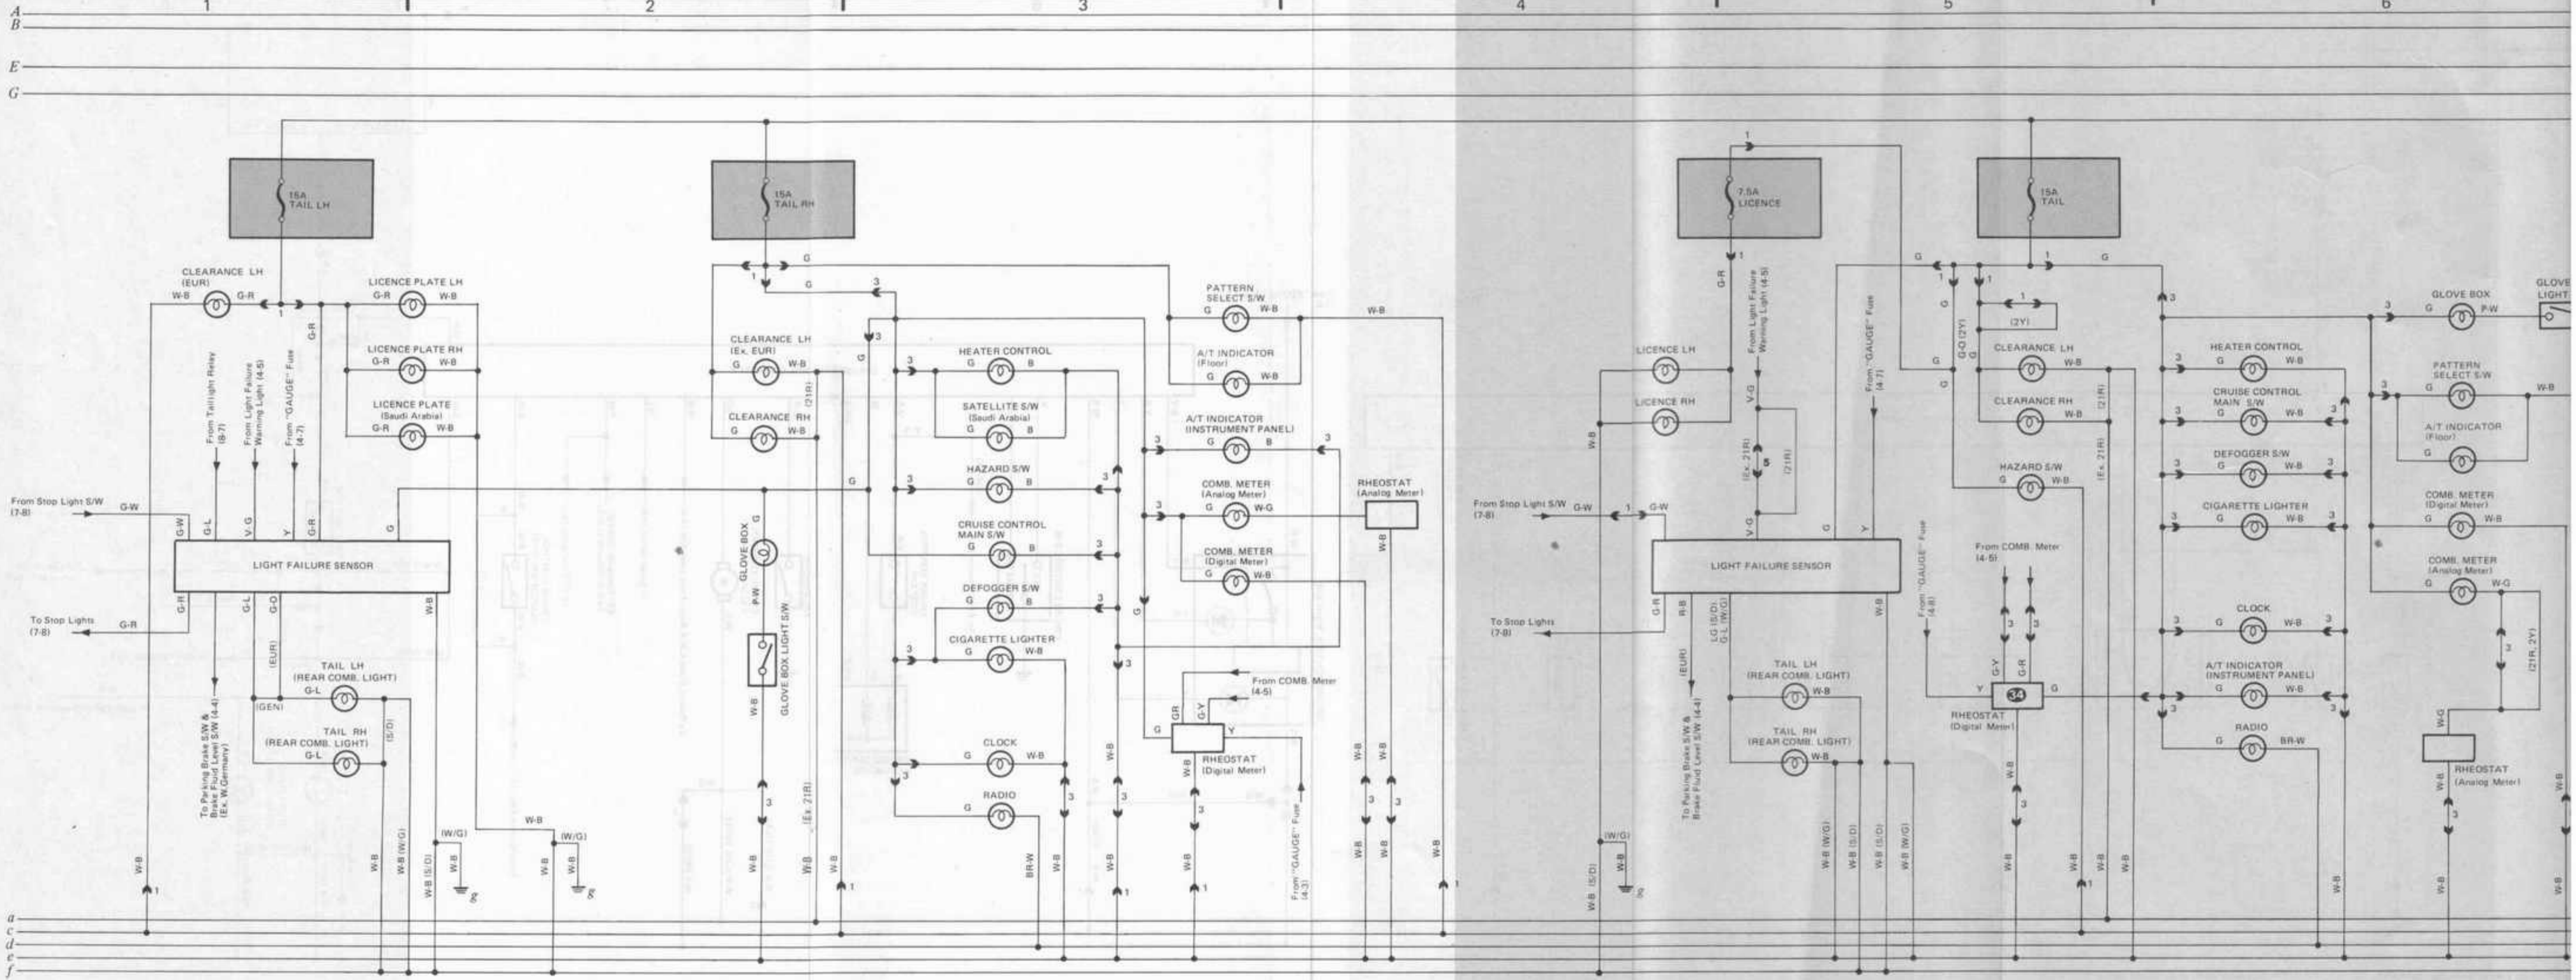

Ground points
 a = LHD: Located on right front fender
 b = LHD: Located on left front fender
 c = Located in J/B No. 1
 d = LHD: Located under left front pillar
 e = LHD: Located under right front pillar
 f = Located on center of back panel
 g = Located in inner panel near right rear combination light (W/G)

a
 b
 c
 d
 e
 f

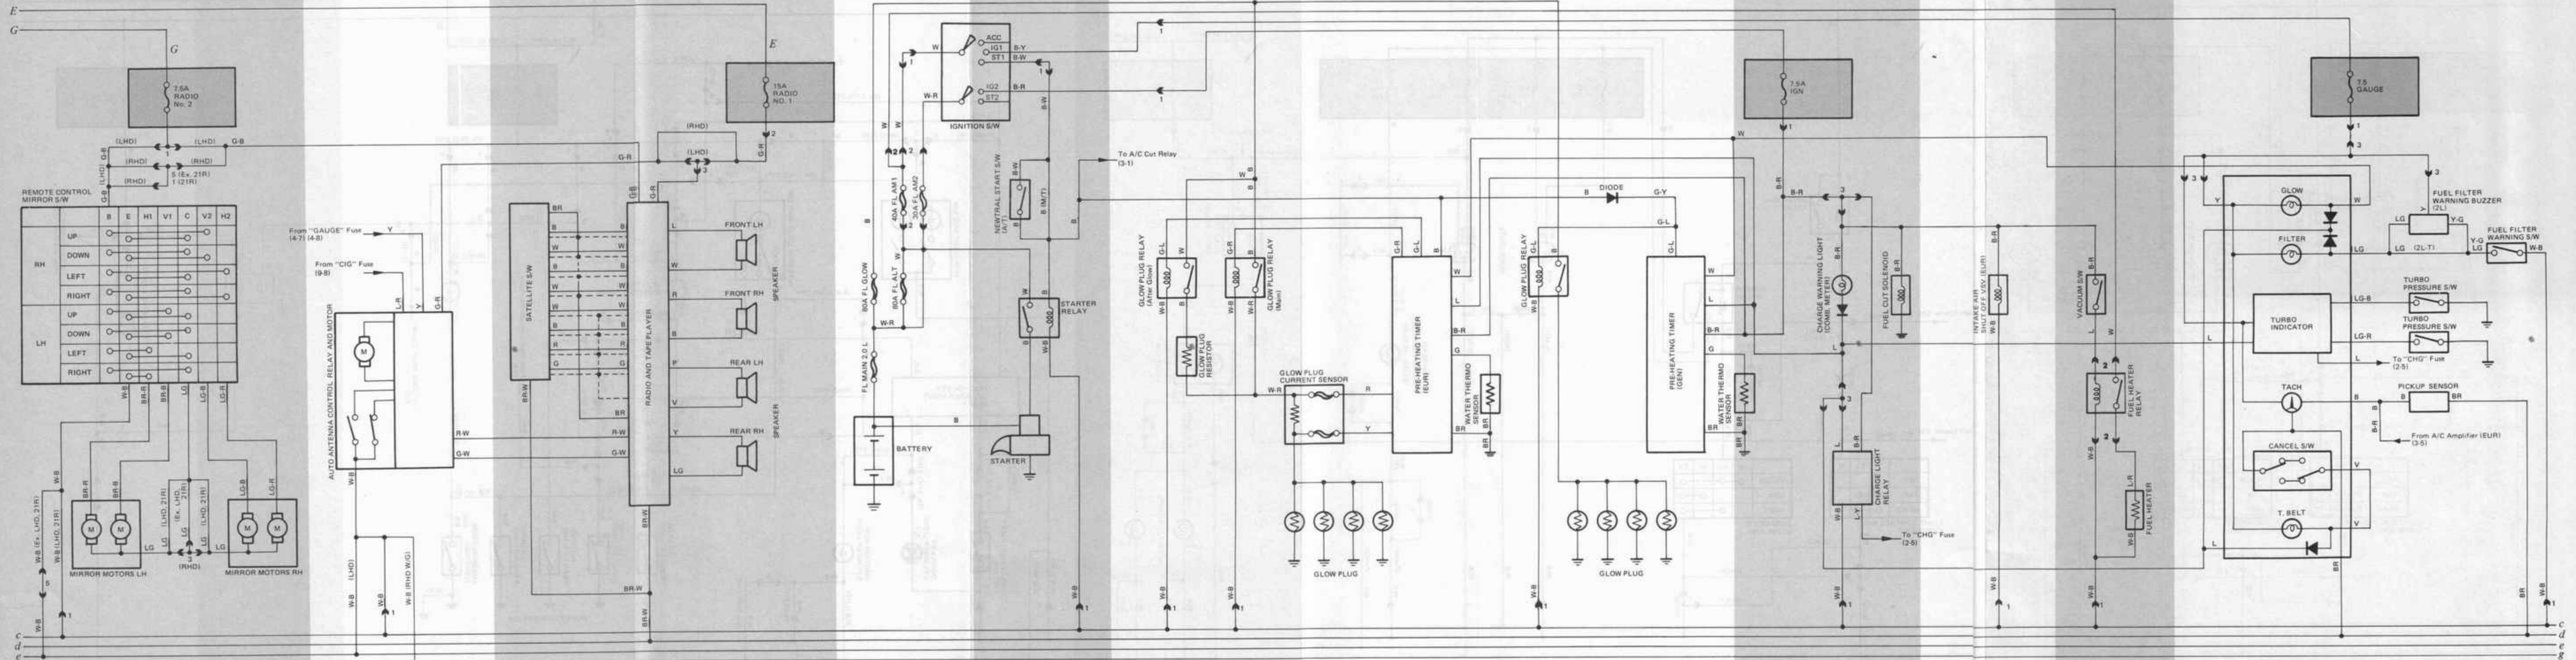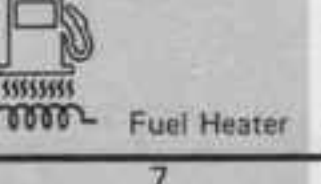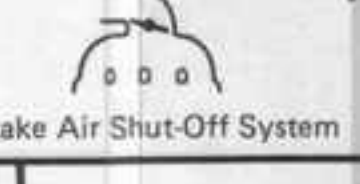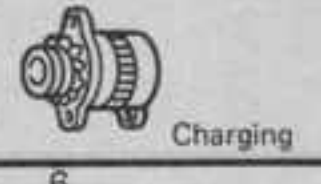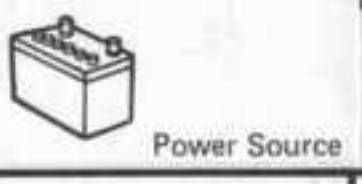

Ground points
 c = Located in J/B No. 1
 d = LHD: Located under left front pillar
 RHD: Located under right front pillar
 e = LHD: Located under right front pillar
 RHD: Located under left front pillar
 f = Located in inner panel near right rear combination light (W/G)