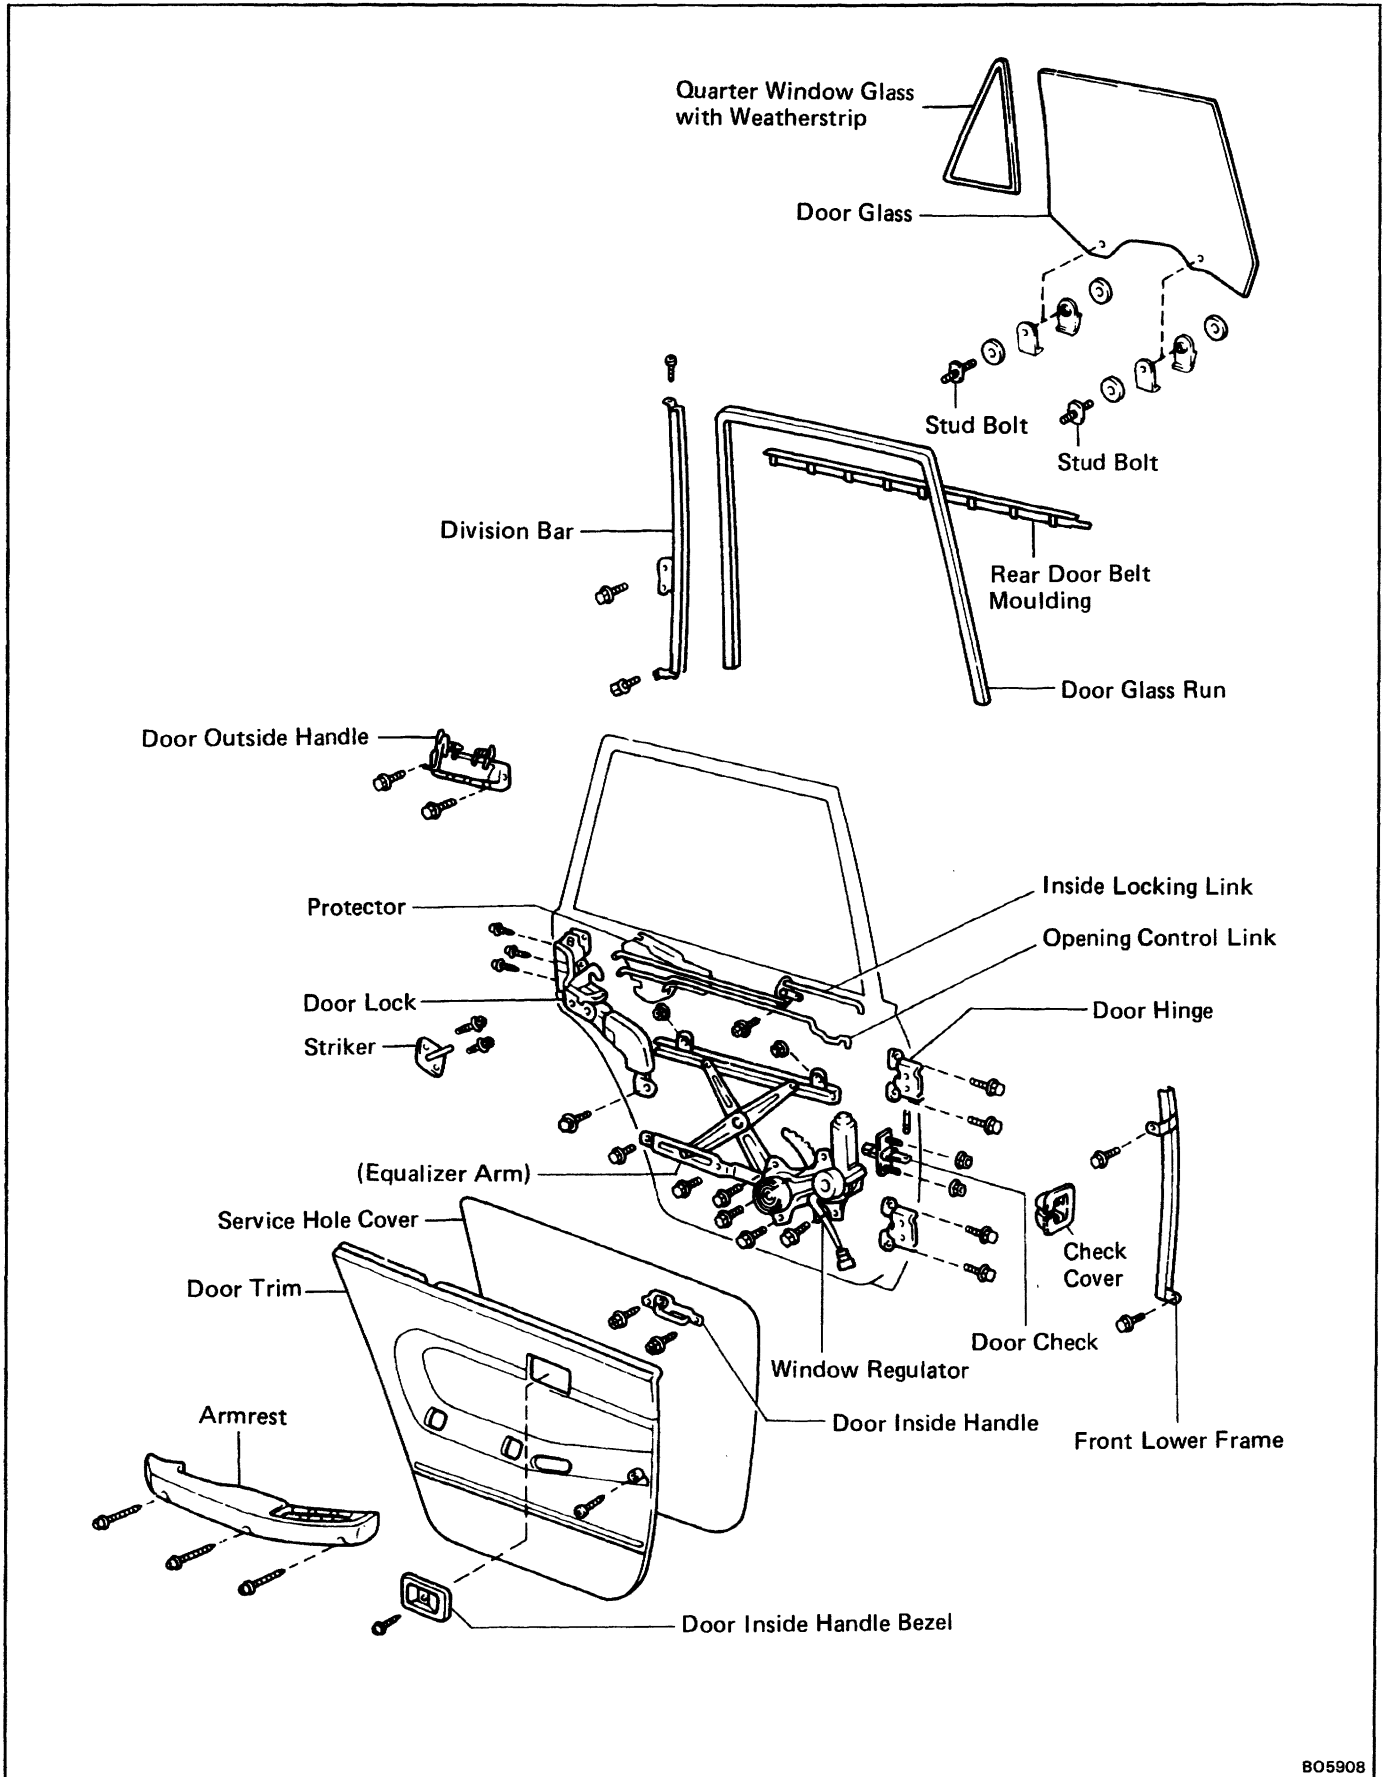
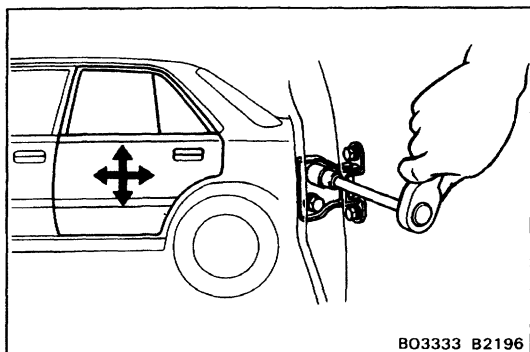


# REAR DOOR COMPONENTS

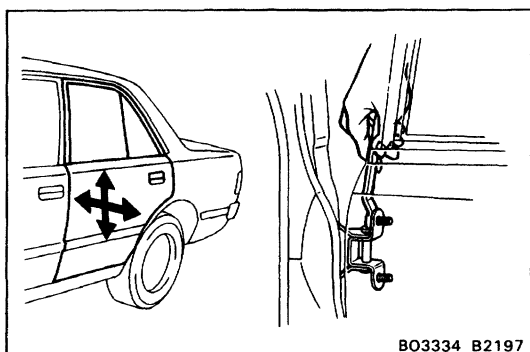




## ADJUSTMENT OF REAR DOOR

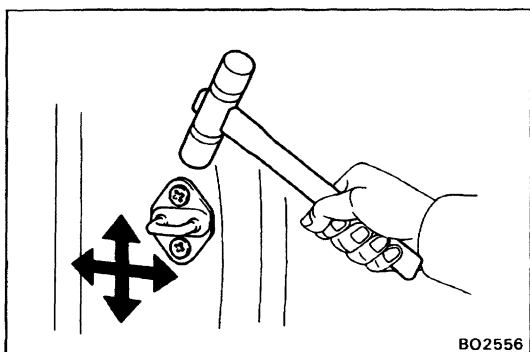
### 1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

Using a wrench, loosen the body side hinge bolts.



### 2. ADJUST DOOR IN LEFT/RIGHT VERTICAL DIRECTIONS

Using a wrench, loosen the door side hinge bolts.



### 3. ADJUST DOOR LOCK STRIKER

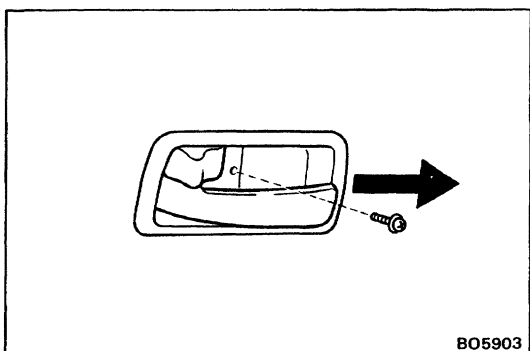
- (a) Check that the door fit and lock linkages are adjusted correctly.
  - (b) Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a hammer.
- Tighten the striker mounting screws again.

## DISASSEMBLY OF REAR DOOR

(See page [BO-12](#))

### 1. REMOVE DOOR INSIDE HANDLE BEZEL

Remove the screw, and slide the door inside handle bezel forward.

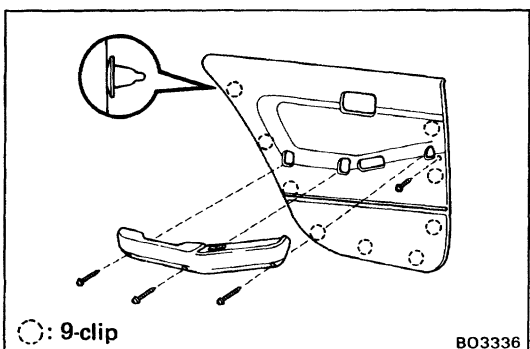


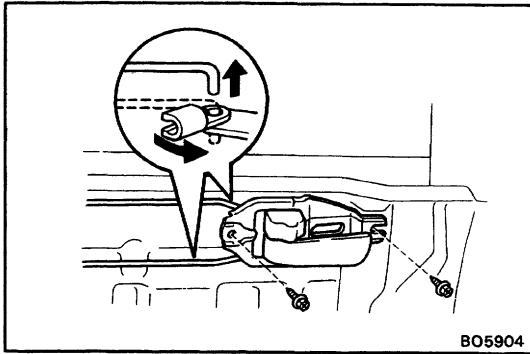
### 2. REMOVE DOOR TRIM

- (a) Remove three screws and the armrest.
- (b) Disconnect the connector.
- (c) Remove the screw.
- (d) Install a screwdriver between the retainers and door trim to pry it loose.

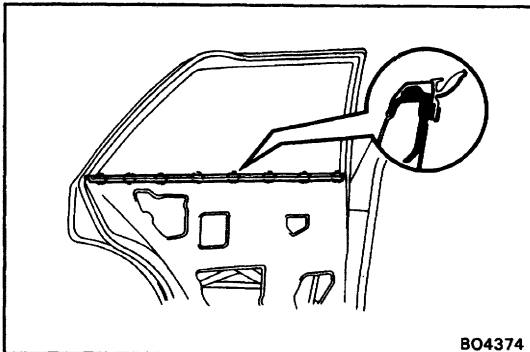
HINT: Tape the screwdriver tip before use.

- (e) Remove the door trim.

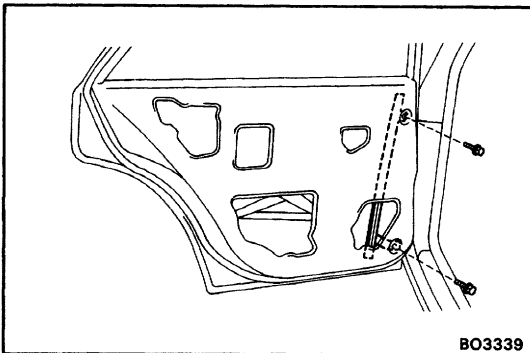


**3. REMOVE DOOR INSIDE HANDLE**

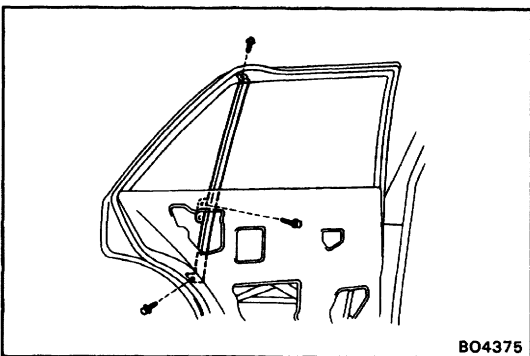
- (a) Remove two screws.
- (b) Disconnect the handle from two links and remove the handle.

**4. REMOVE SERVICE HOLE COVER****5. REMOVE DOOR GLASS RUN****6. REMOVE REAR DOOR BELT MOULDING**

- Pry loose the clips from the edge of the panel and remove the rear door belt moulding.

**7. REMOVE FRONT LOWER FRAME BOLTS**

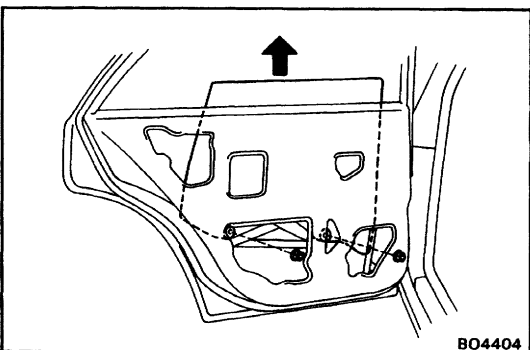
- Remove two bolts.

**8. REMOVE PROTECTOR****9. REMOVE DIVISION BAR**

- (a) Remove the screw under the weatherstrip.
- (b) Remove two bolts from the door panel.
- (c) Pull out the division bar.

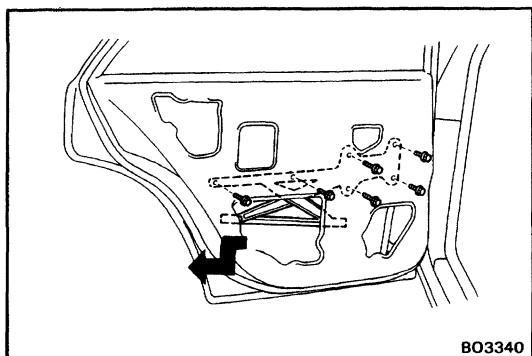
**10. REMOVE QUARTER WINDOW GLASS WITH WEATHERSTRIP**

- Remove the quarter window glass together with the weatherstrip by pulling it forward.

**11. REMOVE DOOR GLASS**

- (a) Wind the glass down into the door cavity.
- (b) Remove two glass mounting nuts and pull it upward.

**12. REMOVE FRONT LOWER FRAME**

**13. REMOVE WINDOW REGULATOR**

- (a) Disconnect the connector.
- (b) Remove four regulator mounting bolts.
- (c) Remove two equalizer arm bracket mounting bolts.
- (d) Remove the regulator through the service hole.

**14. REMOVE INSIDE LOCKING LINK**

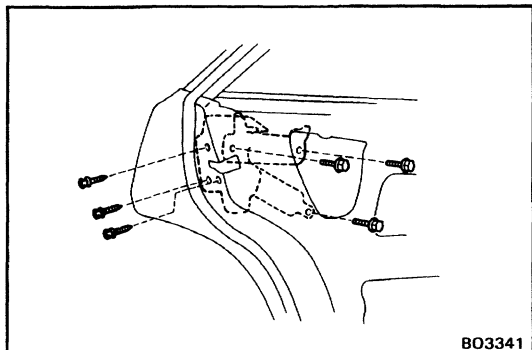
Remove the screw and disconnect the link from the door lock.

**15. REMOVE OPENING CONTROL LINK**

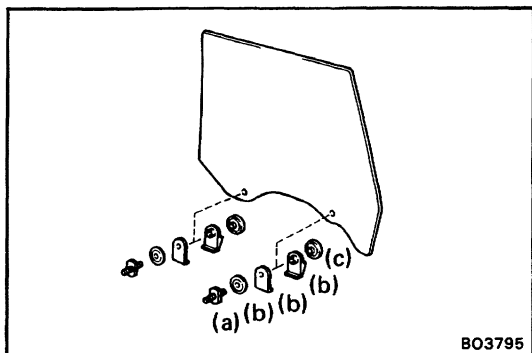
Disconnect the link from the door lock.

**16. REMOVE DOOR LOCK AND DOOR OUTSIDE HANDLE**

- (a) Disconnect the link from the door outside handle.
- (b) Disconnect the connector and remove the bolt from the motor.
- (c) Remove three screws and the door lock.
- (d) Remove two bolts and the door outside handle.

**REPLACEMENT OF GLASS****1. REMOVE FOLLOWING PARTS:**

- (a) Stud bolt
- (b) Washer
- (e) Nut

**2. INSTALL EACH PART TO GLASS****ASSEMBLY OF REAR DOOR**

(See page 130- 12)

**1. BEFORE INSTALLING PARTS, COAT THEM WITH MP GREASE**

- (a) Apply MP grease to the sliding surface and gears of the window regulator.

**NOTICE:** Do not apply MP grease to the spring of the window regulator.

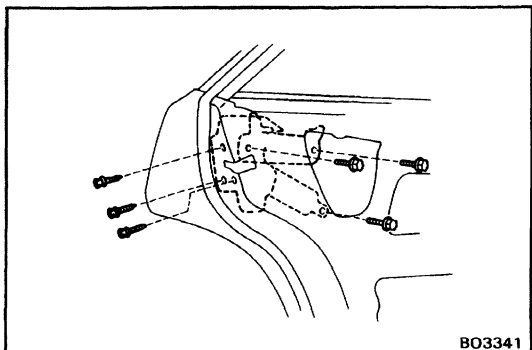
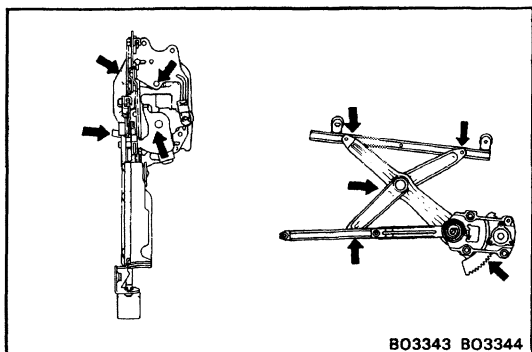
- (b) Apply MP grease to the sliding surface of the door lock.

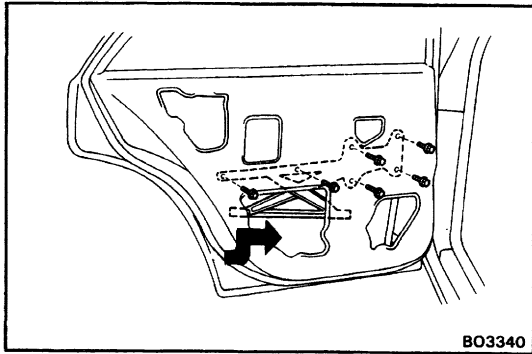
**2. INSTALL DOOR OUTSIDE HANDLE AND DOOR LOCK**

- (a) Install the door outside handle with two bolts.
- (b) Install the door lock with three screws.
- (c) Install the bolt to the motor and connect the connector.
- (d) Connect the link to the door outside handle.

**3. INSTALL OPENING CONTROL LINK**

Connect the link to the door lock.

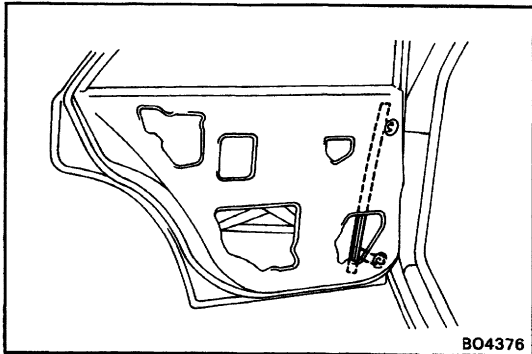
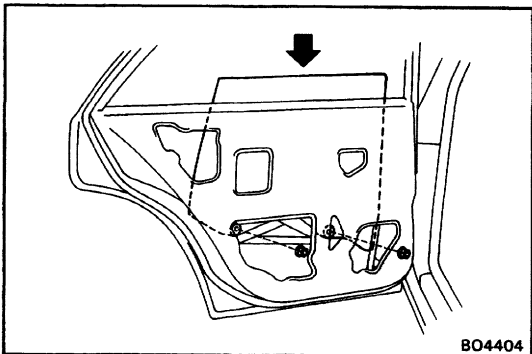


**4. INSTALL INSIDE LOCKING LINK**

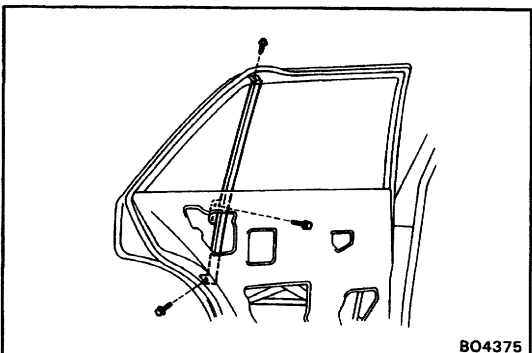
Connect the link to the door lock and install the screw.

**5. INSTALL WINDOW REGULATOR**

- (a) Place the regulator through the service hole.
- (b) Temporarily tighten the equalizer arm bracket mounting bolts.
- (c) Install four regulator mounting bolts.
- (d) Connect the connector.

**6. PLACE FRONT LOWER FRAME****7. INSTALL DOOR GLASS**

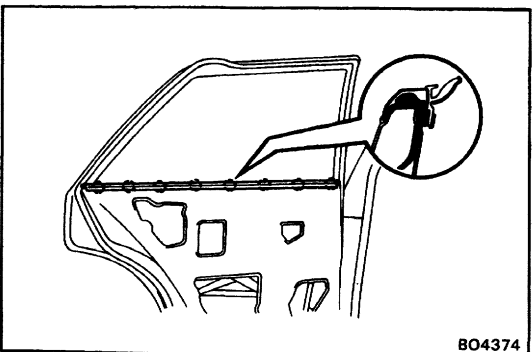
- (a) Place the glass in the door cavity.
- (b) Install the glass to the regulator with two glass mounting nuts.

**8. INSTALL QUARTER WINDOW GLASS WITH WEATHERSTRIP****9. INSTALL DIVISION BAR**

Install the division bar with the screw and two bolts.

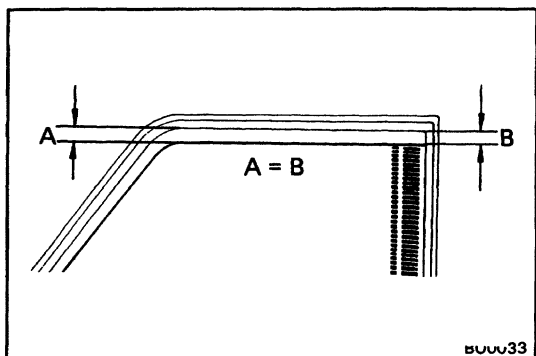
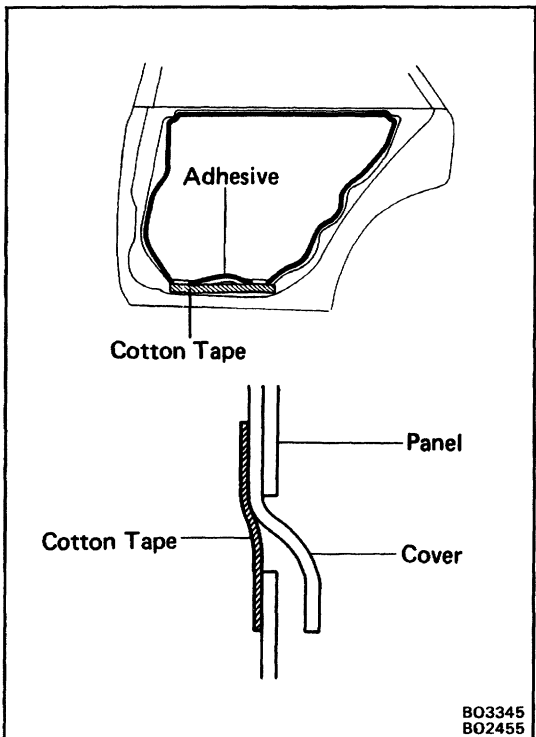
**10. INSTALL PROTECTOR****11. INSTALL FRONT LOWER FRAME**

Install the front lower frame with two bolts.

**12. INSTALL REAR DOOR BELT MOULDING**

Install the claw of the clips into the upper panel slit and push the rear door belt moulding onto the panel.

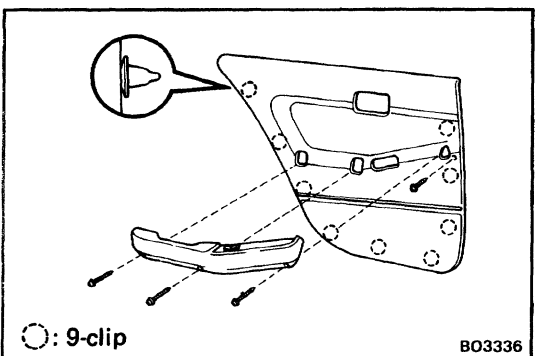
**13. INSTALL DOOR GLASS RUN**

**14. ADJUST DOOR GLASS**(See step 12 on page [BO-10](#))**15. INSTALL SERVICE HOLE COVER**

- (a) Seal the service hole cover with adhesive.
- (b) Install the lower edge of the service hole cover into the panel slit.
- (c) Seal the panel slit with cotton tape.

**NOTICE:** Do not block the trim clip seating with the tape.**16. INSTALL DOOR INSIDE HANDLE**

- (a) Connect the handle to two links.
- (b) Install the handle with two screws.

**17. INSTALL DOOR TRIM**

- (a) Install the door trim with clips to the inside door panel by tapping.
- (b) Install the screw.
- (c) Connect the connector and install the armrest with three screws.

**18. INSTALL DOOR INSIDE HANDLE BEZEL**

Install the door inside handle bezel with the screw.