
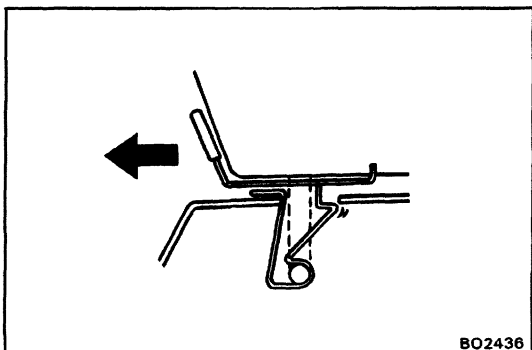


Rear Seat COMPONENTS

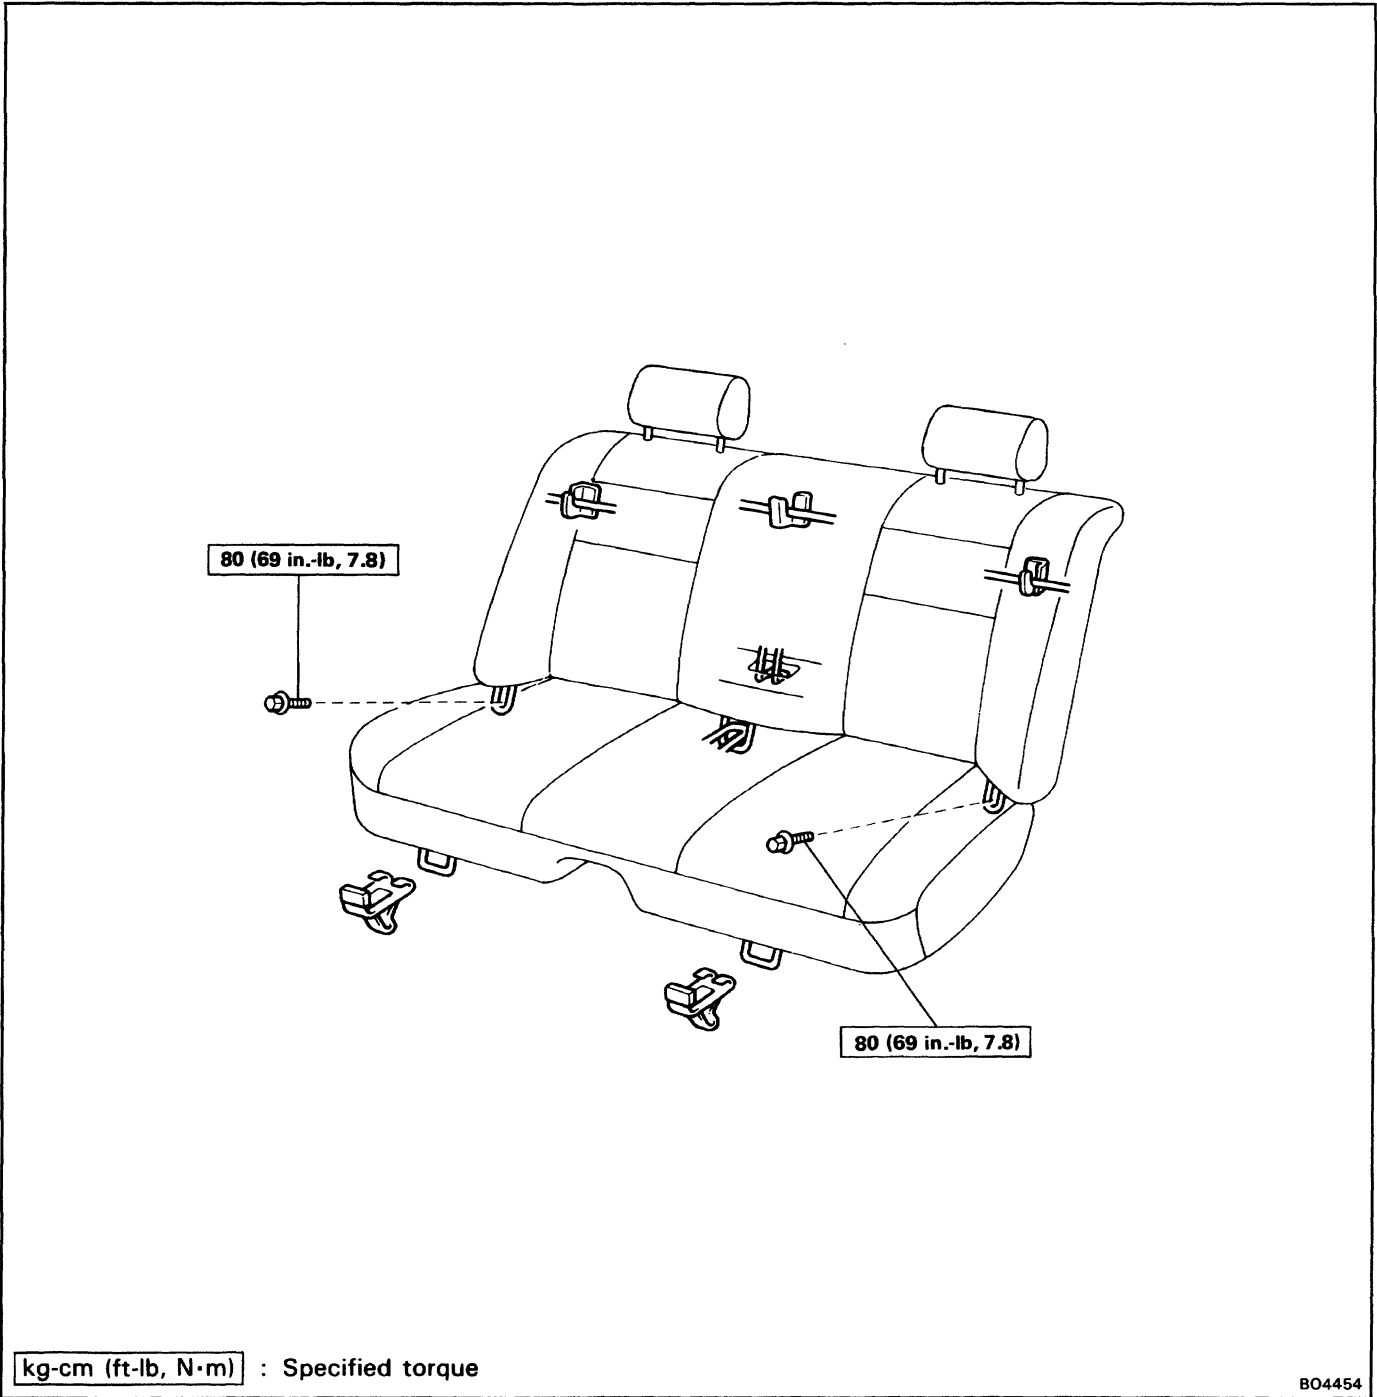

REMOVAL OF REAR SEAT CUSHION

Pull the front left and right levers forward and pull up the seat cushion.