




# Rear Window Moulding COMPONENTS

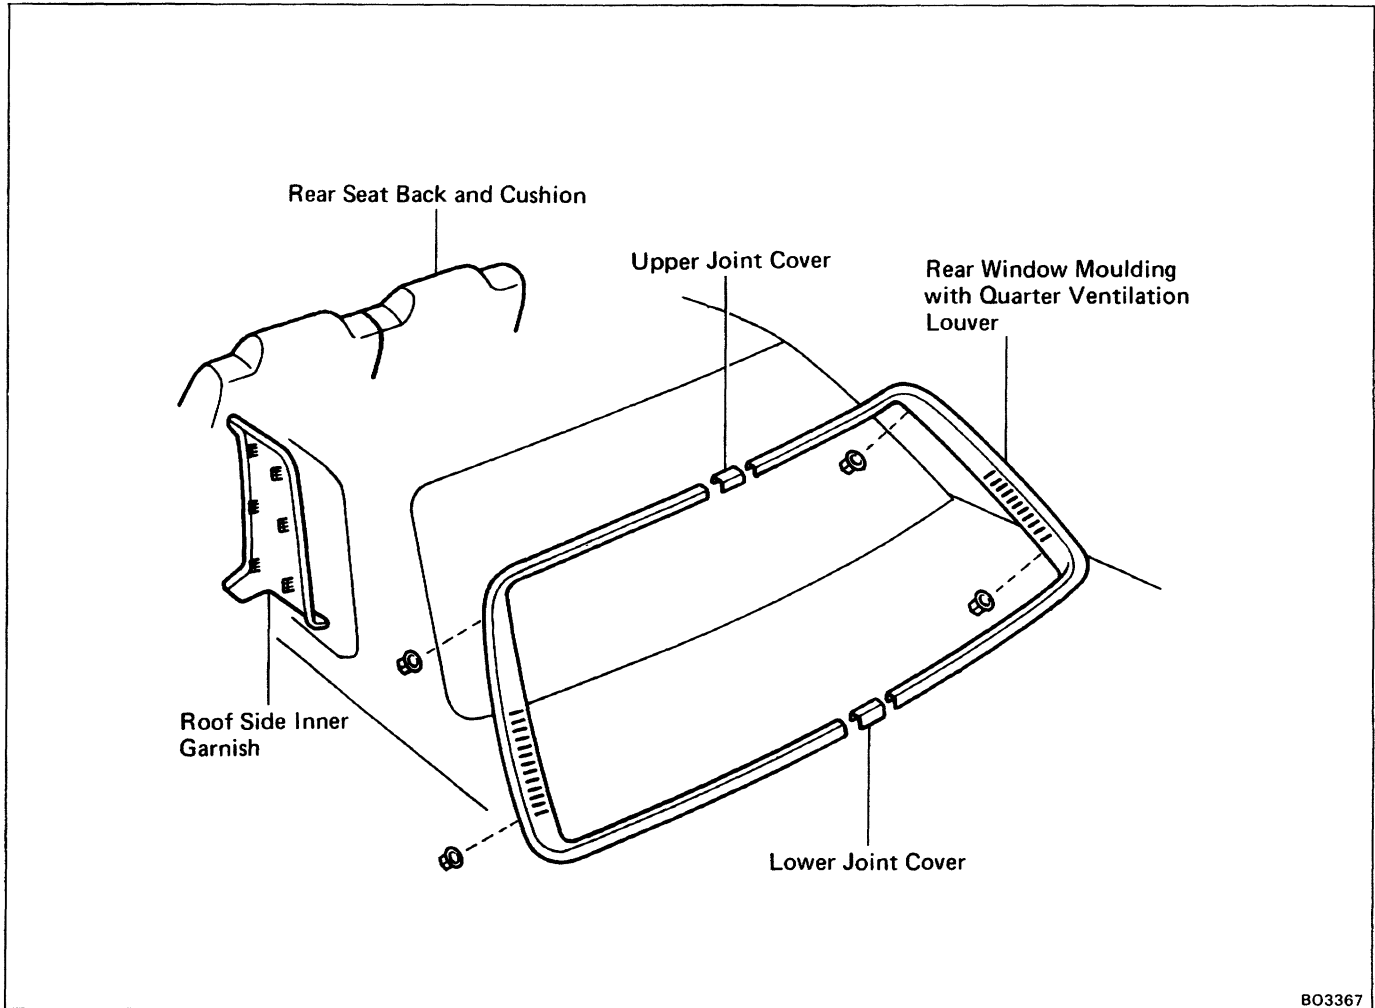

BO3367

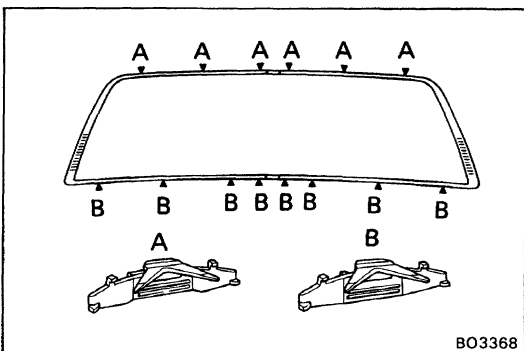

BO3368

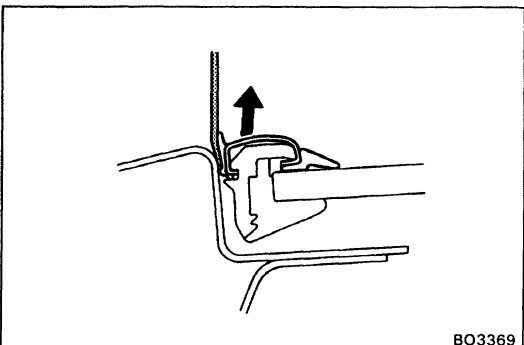

BO3369

## REMOVAL OF REAR WINDOW MOULDING

Location of clips are as shown. Carefully apply adhesive tape to protect the body.

### 1. REMOVE UPPER AND LOWER JOINT COVER

### 2. REMOVE FOLLOWING PARTS:

(See steps 2 to 3 on pages [BO-35](#) and 36)

- Rear seat back and cushion
- Roof side inner garnish


### 3. REMOVE REAR WINDOW MOULDING WITH QUARTER VENTILATION LOUVER

(a) Install the top of a scraper between the body and moulding.


(b) Pry up the scraper to loosen the moulding from the claws of the clips.

HINT: Tape the scraper tip before use.

(c) Remove the upper part of moulding.

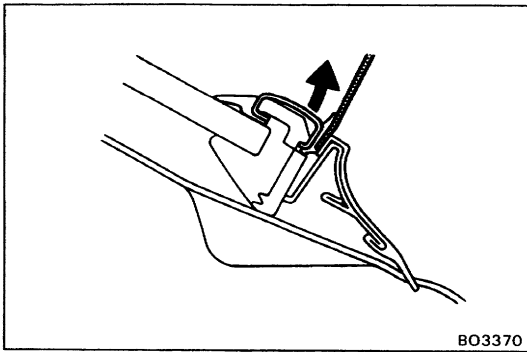


- (d) Remove the lower part of moulding in the same manner as the upper part of moulding.

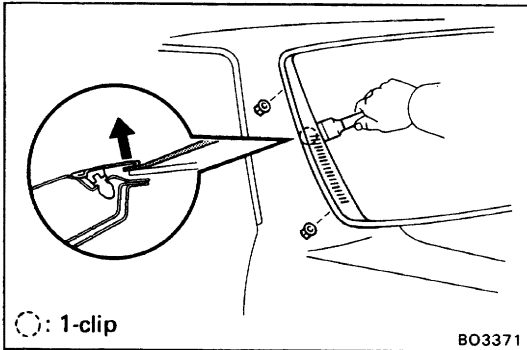

- (e) Remove two nuts.  
 (f) Using a scraper, pry loose the clip and remove the rear window moulding with quarter ventilation louver.  
 HINT: Tape the scraper tip before use.

## REPLACEMENT OF CLIP

If any clips are damaged, replace it.

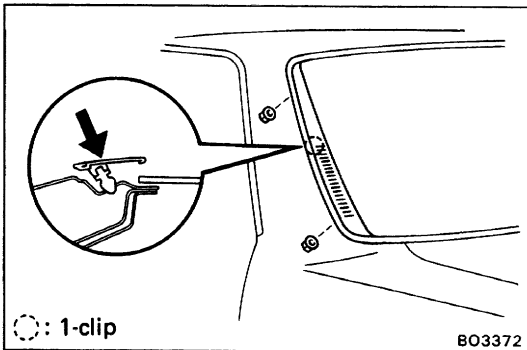


## INSTALLATION OF REAR WINDOW MOULDING


(See page [BO-27](#))

### 1. INSTALL REAR WINDOW MOULDING WITH QUARTER VENTILATION LOUVER

- (a) Place the clip onto the panel and tap the rear window moulding with quarter ventilation louver by hand.  
 (b) Install two nuts.

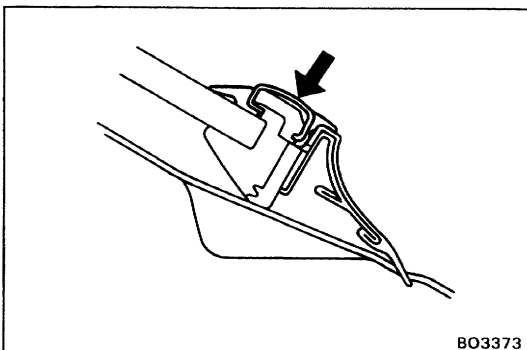

- (c) Place the lower part of moulding onto the clips.  
 (d) Tap the moulding by hand to install it.

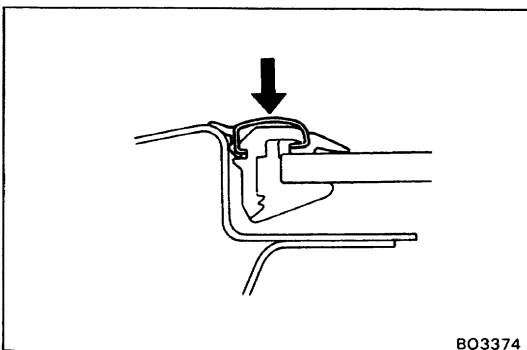

- (e) Install the upper part of moulding in the same manner as the lower part of moulding.

### 2. INSTALL FOLLOWING PARTS:

(See steps 10 to 11 on page [BO-38](#))

- Roof side inner garnish
- Rear seat back and cushion

### 3. INSTALL UPPER AND LOWER JOINT COVER