



## Differential Case (Conventional Type Differential) COMPONENTS

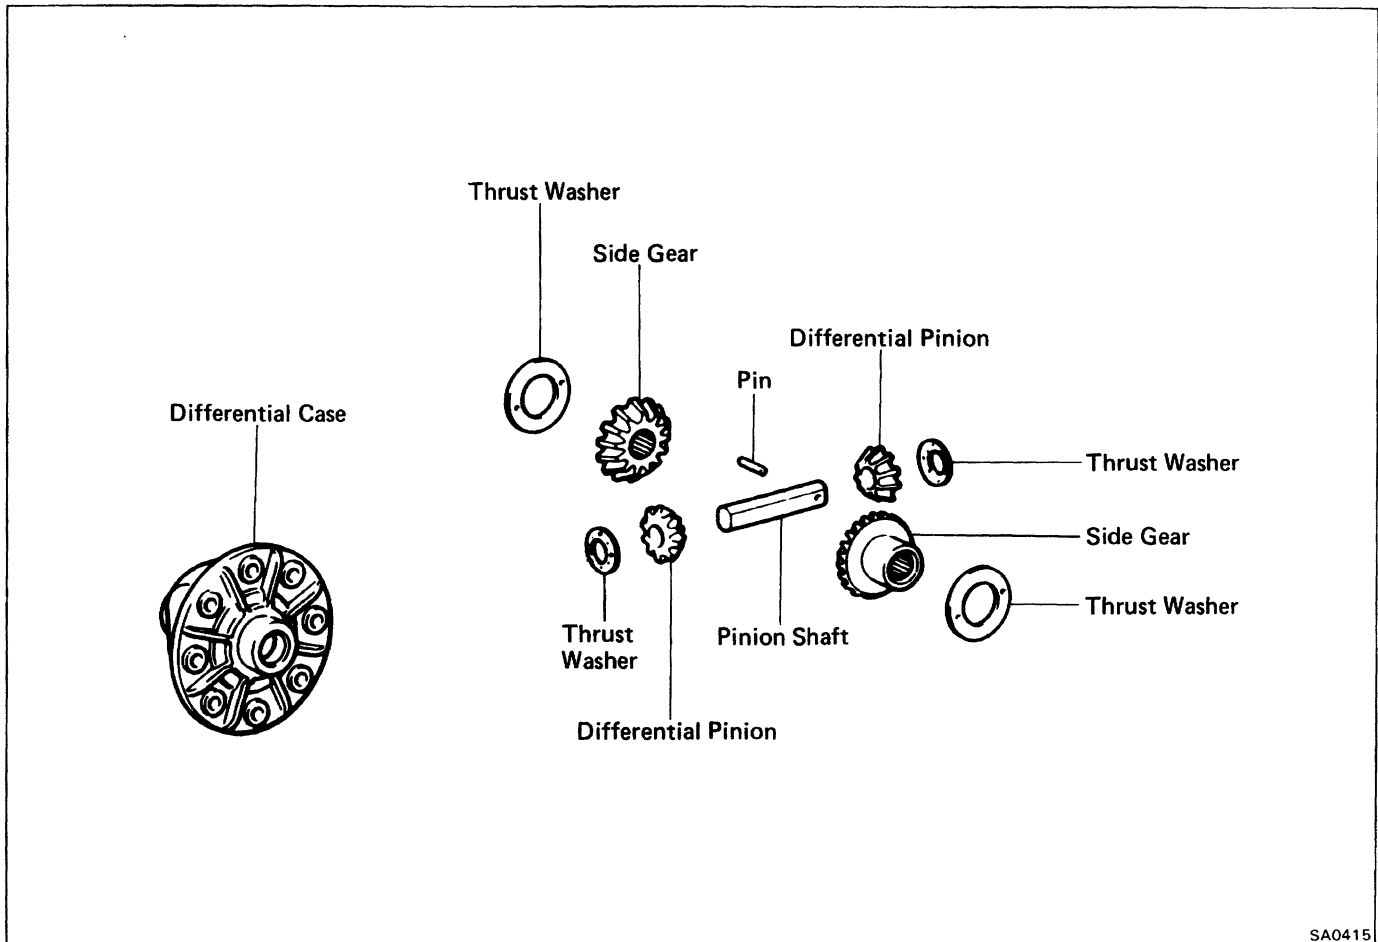

### REMOVAL OF DIFFERENTIAL CASE


1. REMOVE DIFFERENTIAL (See page SA-50)
2. REMOVE DIFFERENTIAL CASE FROM CARRIER  
(See page SA-55)

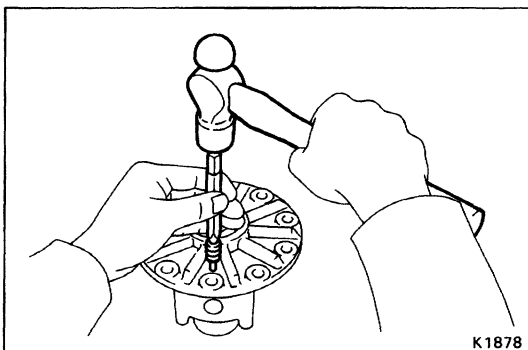


### REPLACEMENT OF DIFFERENTIAL CASE COMPONENT PARTS

#### 1. DISASSEMBLE DIFFERENTIAL CASE


Using a hammer and punch, drive out the straight pin. Remove the pinion shaft, two pinion gears, two side gears and two thrust washers.

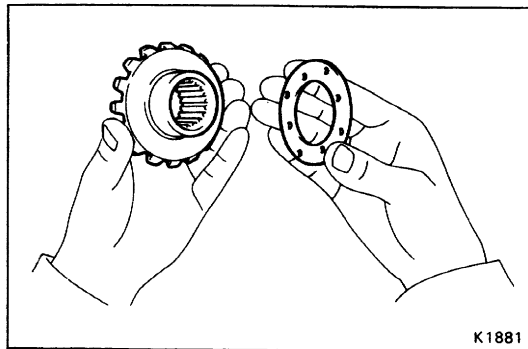


K1881

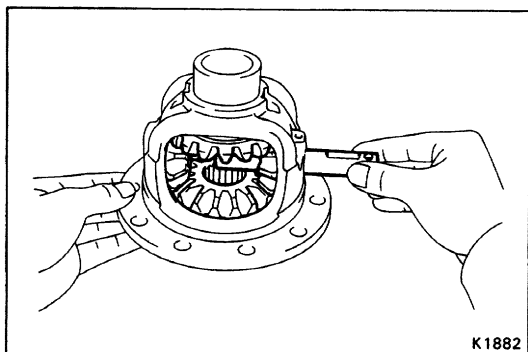


K1882

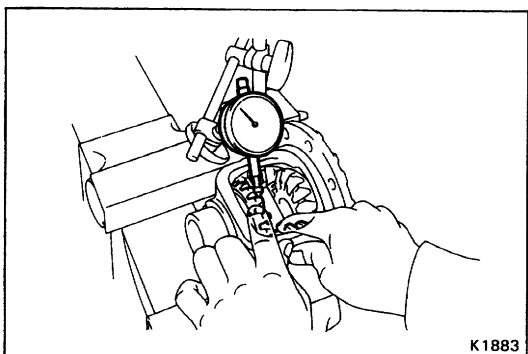

K1883

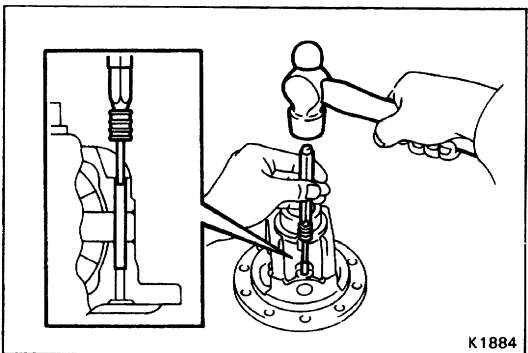

K1884

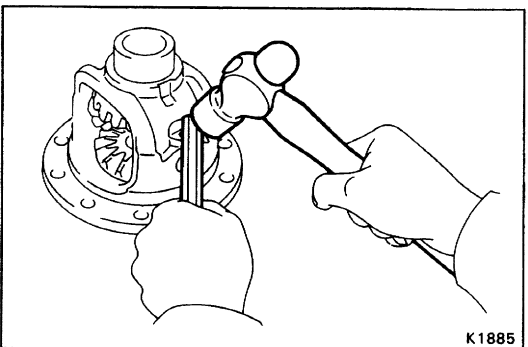

K1885

## 2. ASSEMBLE DIFFERENTIAL CASE

- (a) Install the proper thrust washers and side gears. Using the table below, select thrust washers which will ensure that the backlash is within specification. Try to select washers of the same size for both sides.

**Standard backlash: 0.05 – 0.20 mm**

**(0.0020 – 0.0079 in.)**

Thrust washer thickness	mm (in.)
1.6	(0.063)
1.7	(0.067)
1.8	(0.071)

- (b) Install thrust washers and side gears in the differential case.

- (c) Check the side gear backlash.

Measure the side gear backlash while holding one pinion gear toward the case.

**Standard backlash: 0.05 – 0.20 mm**

**(0.0020 – 0.0079 in.)**

If the backlash is not within specification, install a thrust washer of different thickness.

- (d) Using a hammer and punch, install the straight pin through the case and hole of the pinion shaft.

- (e) Stake the differential case.

## INSTALLATION OF DIFFERENTIAL

### 1. INSTALL DIFFERENTIAL CASE IN CARRIER

(See page [SA-57](#))

### 2. INSTALL DIFFERENTIAL

(See page [SA-50](#))