


## Differential Mounting Cushion

### REMOVAL OF DIFFERENTIAL MOUNTING CUSHION

#### 1. REMOVE DIFFERENTIAL


(See page [SA-50](#))

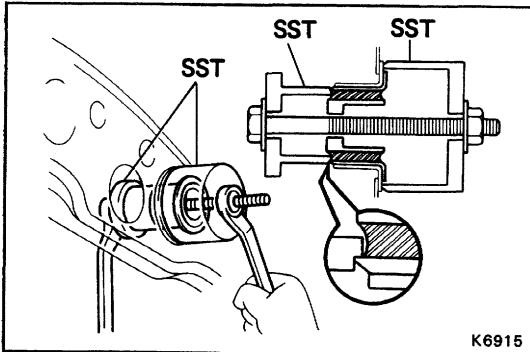

#### 2. REMOVE DIFFERENTIAL MOUNTING CUSHION

Using SST, remove the cushion.

SST 09570-22011

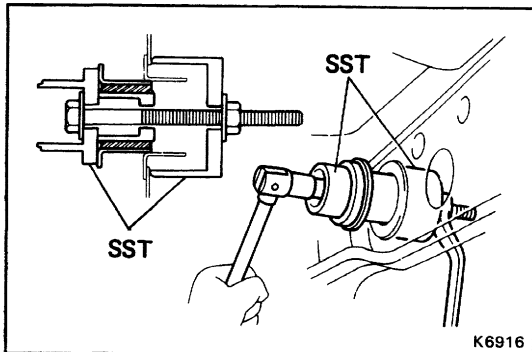

### INSTALLATION OF DIFFERENTIAL MOUNTING CUSHION

#### 1. INSTALL DIFFERENTIAL MOUNTING CUSHION

Using SST, install the cushion.

SST 09570-22011

#### 2. INSTALL DIFFERENTIAL

(See page [SA-50](#))