

Removal and Installation of Differential

Remove and install the parts as shown.

