
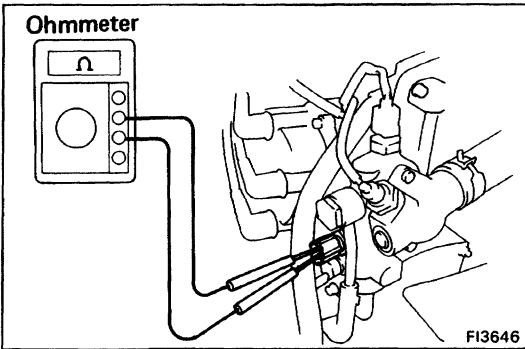


Water Temperature Sensor

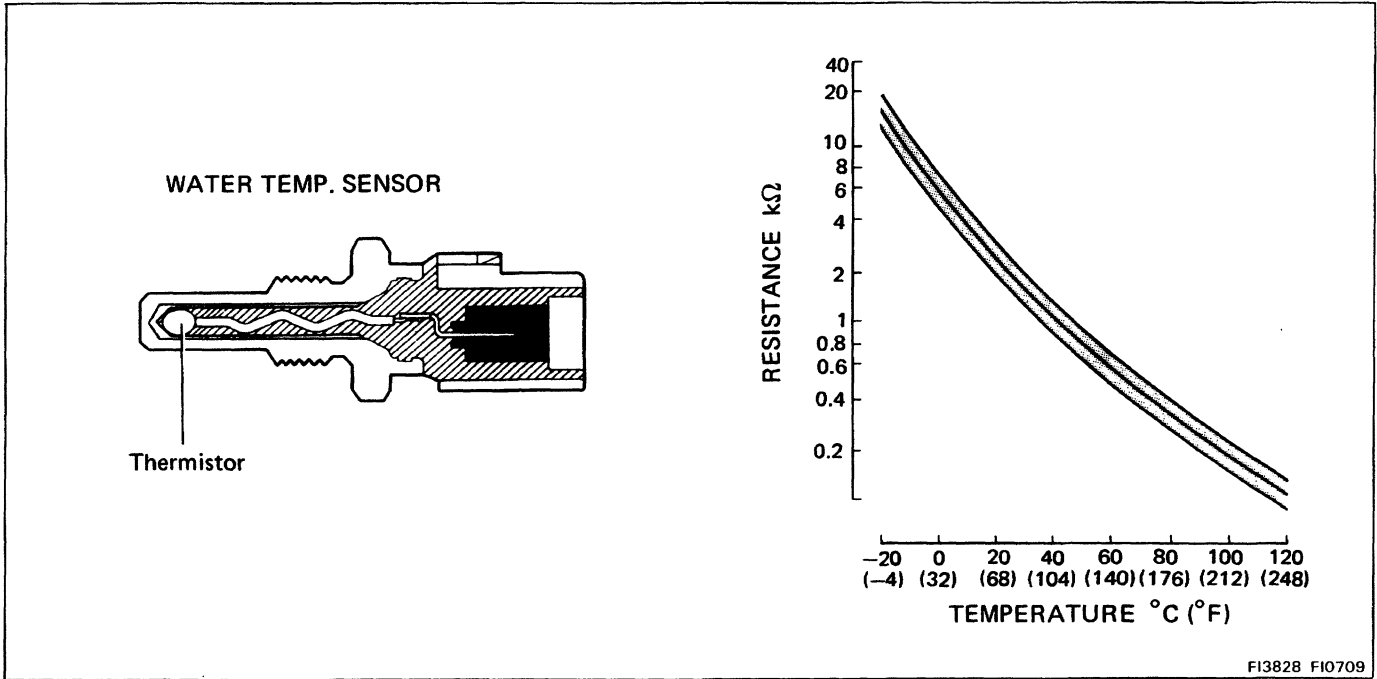

INSPECTION OF WATER TEMPERATURE SENSOR

INSPECT RESISTANCE OF WATER TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance: Refer to chart

If the resistance is not as specified, replace the sensor.