
MAINTENANCE

MAINTENANCE SCHEDULE

SCHEDULE A

Maintenance operations: A = Check and adjust if necessary;
 R = Replace, change or lubricate;
 I = Inspect and correct or replace delivery use, if necessary

CONDITIONS

- Towing a trailer, using a camper or car top carrier. Maintenance
- Operating on dusty, rough, muddy or salt spread roads.
- Repeated short trips of less than 5 miles (8 km) with outside temperatures remain below freezing.
- Extensive idling and/or low speed driving for long distances, such as police, taxi or door-to-door delivery use.

System	Service interval (Use odometer reading or months, whichever comes first)	Maintenance services beyond 60,000 miles (96,000 km) should continue to be performed at the same intervals shown for each maintenance schedule.																		See page (item No.)	
		Miles × 1,000	3.75	7.5	11.25	15	18.75	22.5	26.25	30	33.75	37.5	41.25	45	48.75	52.5	56.25	60	Months		
	Maintenance items	km × 1,000	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96			
ENGINE	Timing belt (1)																		R	MA-4 (item 1)	
	Valve clearance																		A	A: Every 72 months	MA-6 (item 12)
	Drive belts	I: First period 60,000 miles or 72 months. I: After that every 7,500 miles or 12 months.																		MA-4 (item 2)	
	Engine oil and oil filter	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R: Every 6 months	MA-5 (item 6)
	Engine coolant	R: First period 45,000 miles or 36 months. R: After that every 30,000 miles or 24 months.																		MA-5 (item 7)	
	Exhaust pipes and mountings				I						I					I				I	I: Every 24 months
FUEL	Air filter (2)		I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	R	I: Every 6 months R: Every 36 months	MA-5 (item 4 or 5)	
	Fuel line and connections (3)									I								I	I: Every 36 months	MA-6 (item 10)	
	Fuel tank cap gasket																	R	R: Every 72 months	MA-6 (item 9)	
IGNITION	Spark plugs (Platinum tipped type)																	R	R: Every 72 months	MA-5 (item 3)	
EVAP	Charcoal canister																	I	I: Every 72 months	MA-6 (item 8)	
BRAKES	Brake linings and drums (4)			I		I				I				I				I	I: Every 12 months	MA-7 (item 15)	
	Brake pads and discs (Front and rear)			I		I				I				I				I	I: Every 12 months	MA-7 (item 14)	
	Brake line pipes and hoses					I				I				I				I	I: Every 24 months	MA-7 (item 13)	
CHASSIS	Steering linkage			I		I				I				I				I	I: Every 12 months	MA-8 (item 16)	
	Ball joints and dust covers			I		I				I				I				I	I: Every 12 months	MA-8 (item 18)	
	Automatic transmission and differential oil					R				R				R				R	R: Every 24 months	MA-9 (item 19, 20, 21)	
	Steering gear box oil (5)					I				I				I				I	I: Every 24 months	MA-8 (item 17)	
	Bolts and nuts on chassis and body (6)			I		I				I				I				I	I: Every 12 months	MA-10 (item 22)	

★ mark indicate maintenance which is part of the warranty conditions for the Emission Control System. The warranty period is in accordance with the owner's guide or the warranty booklet. (★ : California specification vehicles)

- (1) Applicable to vehicles operated under conditions of extensive idling and/or low speed driving for long distances such as police, taxi or door-to-door delivery use.
- (2) Applicable when operating mainly on dusty roads. For other usage conditions, refer to SCHEDULE B.
- (3) Includes inspection of fuel tank band and vapor vent system.
- (4) Also applicable to lining drum for parking brake.
- (5) Check for oil leaks from steering gear box.
- (6) Applicable only when operating mainly on rough, muddy roads, The applicable parts are listed below. For other usage conditions, refer to SCHEDULE B.

- Front and rear suspension member cross body.
- Strut bar bracket cross body.
- Bolts for sheet installation.

SCHEDULE B

CONDITIONS Conditions other than those listed for SCHEDULE A.

System	Service interval (Use odometer reading or months, whichever comes first)	Maintenance services beyond 60,000 miles (96,000 km) should continue to be performed at the same intervals shown for each maintenance schedule.										See page (item No.)	
		Miles × 1,000	7.5	15	22.5	30	37.5	45	52.5	60	Months		
	Maintenance items	km × 1,000	12	24	36	48	60	72	84	96			
ENGINE	Valve clearance									A	A: Every 72 months	MA-6 (item 12)	
	Drive belt		I: First period 60,000 miles or 72 months. I: After that every 7,500 miles or 12 months										MA-4 (item 2)
	Engine oil and oil filter*		R	R	R	R	R	R	R	R	R	R: Every 12 months	MA-5 (item 6)
	Engine coolant		R: First period 45,000 miles or 36 months. R: After that every 30,000 miles or 24 months										MA-5 (item 7)
	Exhaust pipes and mountings					I					I	I: Every 36 months	MA-6 (item 11)
FUEL	Air filter					R				R	R: Every 36 months	MA-5 (item 5)	
	Fuel lines and connections (1)					I				I	I: Every 36 months	MA-6 (item 1:0)	
	Fuel tank cap gasket									R	R: Every 72 months	MA-6 (item 9:)	
IGNITION	Spark plugs (Platinum tipped type)									R	R: Every 72 months	MA-5 (item 3)	
EVAP	Charcoal canister									I	I: Every 72 months	MA-6 (item 8)	
BRAKES	Brake linings and drums I21			I		I				I	I: Every 24 months	MA-7 (item 15)	
	Brake pads and discs (Front and rear)			I		I				I	I: Every 24 months	MA-7 (item 1-4)	
	Brake line pipes and hoses			I		I				I	I: Every 24 months	MA-7 (item 13)	
CHASSIS	Steering linkage			I		I				I	I: Every 24 months	MA-8 (item 16)	
	Ball joints and dust covers			I		I				I	I: Every 24 months	MA-8 (item 18)	
	Automatic transmission and differential (ex. LSD) oil (3)			I		I				I	I: Every 24 months	MA-9 (item 19)	
	Limited slip differential (LSD) oil			I		R				R	I: Every 24 months, R: Every 48 months	MA-9 (item 19 or 21)	
	Steering gear box oil (4)			I		I				I	I: Every 24 months	MA-8 (item 17)	
	Bolts and nuts on chassis and body (5'			I		I				I	I: Every 24 months	MA-10 (item 22)	

★ mark indicate maintenance which is part of the warranty conditions for the Emission Control System. The warranty period is in accordance with the owner's guide or the warranty booklet. (★: California specification vehicles)

- (1) Includes inspection of fuel tank band and vapor vent system.
- (2) Also applicable to lining drum for parking brake.
- (3) Check for leakage
- (4) Check for oil leaks from steering gear box.
- (5) Applicable only when operating mainly on rough, muddy roads, The applicable parts are listed below. For other usage conditions, refer to SCHEDULE B.
 - Front and rear suspension member cross body.
 - Strut bar bracket cross body.
 - Bolts for sheet installation.