

INSTALLATION OF STARTER


1. INSTALL STARTER

Install the starter with the two bolts and nuts.

2. CONNECT CONNECTOR AND CABLE TO STARTER


3. CONNECT CABLE TO NEGATIVE TERMINAL OF BATTERY

4. CHECK THAT ENGINE STARTS

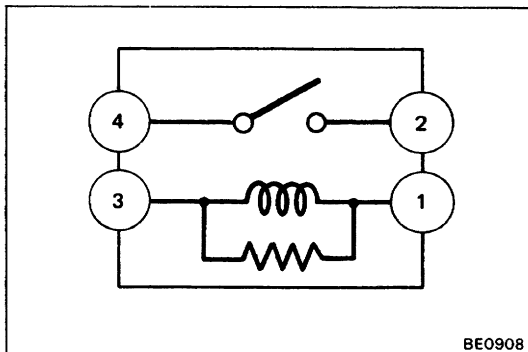

STARTER RELAY (USA only) INSPECTION OF STARTER RELAY


LOCATION: In the driver's kick panel.

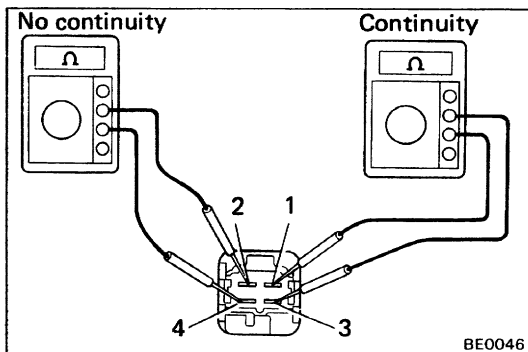

1. INSPECT RELAY CONTINUITY

- Using an ohmmeter, check that there is continuity between terminals 1 and 3.
- Check that there is no continuity between terminals 2 and 4.

If continuity is not as specified, replace the relay.

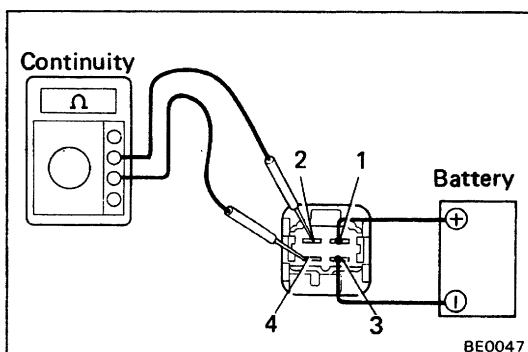

2. INSPECT RELAY OPERATION

- Apply battery voltage across terminals 1 and 3.
- Using an ohmmeter, check that there is continuity between terminals 2 and 4.

If operation is not as specified, replace the relay.