

## PRECAUTIONS

Care must be taken to replace parts properly because they could affect the performance of the steering system and result in a driving hazard.

## TROUBLESHOOTING

Problem	Possible cause	Remedy	Page
Hard steering	Tires improperly inflated	Inflate tires to proper pressure	<a href="#">SA-3</a>
	Excessive caster	Check front wheel alignment	<a href="#">SA-5</a>
	Steering system joint worn	Replace steering system joints	<a href="#">SR-35</a>
	Lower arm ball joints worn	Inspect lower arm ball joints	<a href="#">SA-22</a>
	Steering column binding	Inspect steering column	<a href="#">SR-5</a>
	Steering gear out of adjustment or broken	Adjust or repair steering gear	<a href="#">SR-35</a>
	Power steering belt loose	Adjust belt	<a href="#">SR-21</a>
	Oil level in reservoir low	Check reservoir	<a href="#">SR-21</a>
	Power steering unit faulty	Check power steering unit	<a href="#">SR-26</a>
Poor return	Tires improperly inflated	Inflate tires to proper pressure	<a href="#">SA-3</a>
	Wheel alignment incorrect	Check front wheel alignment	<a href="#">SA-4</a>
	Steering column binding	inspect steering column	<a href="#">SR-5</a>
	Steering gear out of adjustment or broken	Adjust or repair steering gear	<a href="#">SR-35</a>
Excessive play	Front wheel bearing worn	Replace front wheel bearing	<a href="#">SA-9</a>
	Main shaft yoke or intermediate shaft yoke worn	Replace main shaft or intermediate shaft	
	Lower arm ball joints worn	Inspect lower arm ball joints	<a href="#">SA-22</a>
	Steering system joints worn	Replace steering system joints	<a href="#">SR-35</a>
	Steering gear out of adjustment or broken	Adjust or repair steering gear	<a href="#">SR-35</a>
Abnormal noise	Steering linkage loose	Tighten steering linkage	
	Steering system joints worn	Replace steering system joints	<a href="#">SR-35</a>
	Steering gear out of adjustment or broken	Adjust or repair steering gear	<a href="#">SR-35</a>