
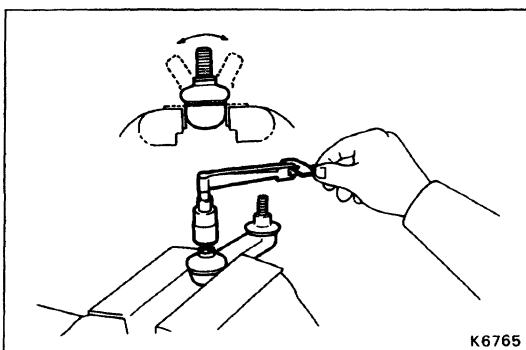


## Stabilizer Bar COMPONENTS

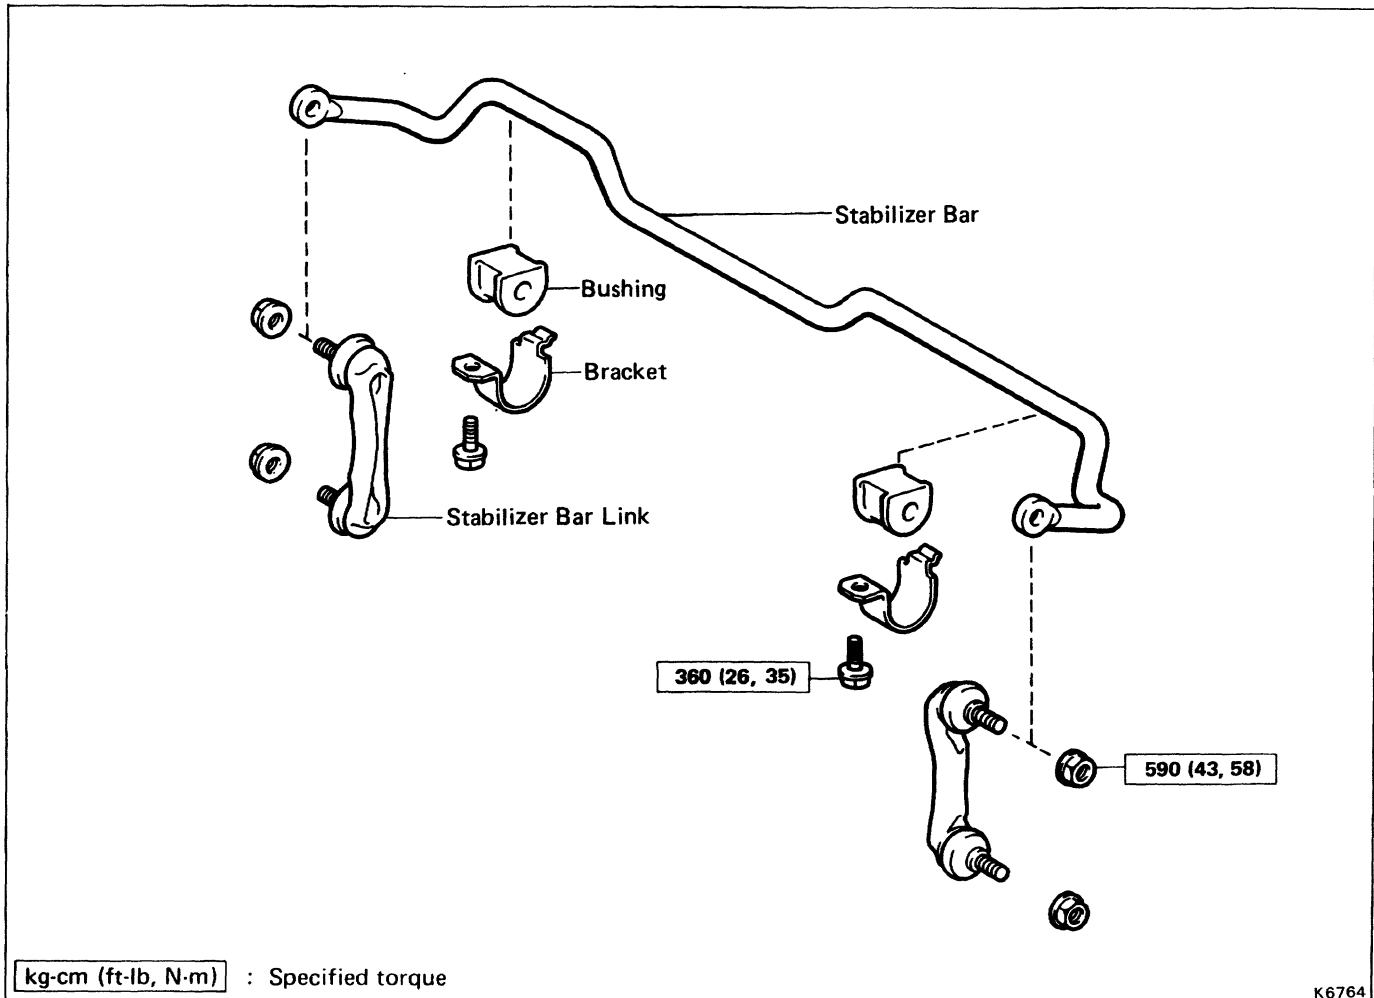

### INSPECTION OF STABILIZER BAR LINK BALL JOINT

#### INSPECT BALL JOINT FOR ROTATION CONDITION

- Flip the ball joint stud back and forth 5 times as shown in the figure, before installing the nut.
- Using a torque gauge, turn the nut continuously one turn each 2 – 4 seconds and take the torque reading on the fifth turn.

**Torque (turning): 3 – 12 kg-cm**

**(2.6 – 10.4 in.-lb, 0.3 – 1.2 N-m)**

If not within specification, replace the stabilizer bar link.