

WIRING DIAGRAMS

Fig. 1: Engine Compartment & Headlights (Grid 1-3)
1991 Toyota Cressida

COMPONENT LOCATOR:

A/C COMP CLUTCH RELAY	B 31
A/C CONDENSER FAN RELAY	A 31
A/C DUAL PRES SW	C 31
A/C HIGH PRES SW	A 31
A/C POWER TRANSISTOR	A 28
A/C SYSTEM AMPLIFIER	A-29
A/T INDICATOR SW	E 39
ABS ACTUATOR	A 20-21
ABS ECU	A 22-23
AIR VENT MODE CONTROL	
SERVO MOTOR	D-E 27
ALTERNATOR	C 3
AUTO ANTENNA MOTOR/RELAY	B-C 48
AUTO SHOULDER BELT ECU	E 29-31
AUTO SHOULDER BELT LIMIT SWS	D 28
AUTO SHOULDER BELT RELEASE	
VALVE WARNING LT	D 31
BATTERY	A 2
BLOWER CONTROL RELAY	C 28
BLOWER RESISTOR	D 28
BRAKE FLUID LEVEL SW	A 39
CHECK CONN.	D-E 11
CIG LIGHTER	A 43
CIRCUIT OPENING RELAY	A 9
CLOCK START INJECTOR	B 43
COLD START INJECTOR	C 3
COMBINATION SW	A-C 32
CRUISE CONTROL ECU	E 22
CRUISE CONTROL VACUUM PUMP	E 23
DOOR COURTESY SWS	D-E 43
DOOR LOCK CONTROL RELAY	A 44-45
DOOR LOCKS	B-D 46-47
ECU PATTERN SELECT SW	E 38
EXTRA HIGH SPEED RELAY	B 28
FUS LINK BOX	A 5-6
HAZARD SW	B 35
HEATER CONTROL SW	A-E 24-25
IGNITION COIL W/IGNITER	E 9
IGNITION SW	A 13
INST CLSTR RELAY	A-E 36
INTEGRATION RELAY	C 18
J1 JUNCTION CONN	E 41-42
J2 JUNCTION CONN	E 5-6
J3 JUNCTION CONN	A 41-42
JUNCTION BLOCK #1 (J/B #1)	B-D 13-18
JUNCTION BLOCK #2 (J/B #2)	B-C 5-6
KEY INTERLOCK SOLENOID	D 21
LEFT DOOR COURTESY LT	D 43
LEFT DOOR LOCK/UNLOCK SW	E 28
LT FAILURE SENSOR	C 48
LUGGAGE COMPT LT	E 40
MAIN FUS LINK	A 2
MIRROR HEATERS	D 50
MOONROOF CONTROL ECU	C-D 48
ODI MAIN SW	B 40
POWER SEAT CONTROL SW	A 48-49
POWER WINDOW MASTER SW	E 44-46
PROGRESSIVE POWER	
STEERING (PPS) ECU	D 23
REAR WINDOW DEFOG SW	A 41
RECIRC/FRESH CONTROL	
SERVO MOTOR	E 25
RELAY BLOCK #3 (R/B #3)	C-48
RELAY BLOCK #4 (R/B #4)	C-32
REMOTE CONTROL MIRROR SW	E 48
RHEOSTAT	C 43
RIGHT DOOR COURTESY LT	E 40
RIGHT DOOR LOCK/UNLOCK SW	C 28
RIGHT FRONT DOOR	
LOCK CONTROL SW	A 45
SHIFT LOCK CONTROL ECU	C 20
STARTER	A 3
STOP LT SW	E 20
TCCS ECU	A-E 8
TDCL CHECK CONN	B 11
UNLOCK WARNING SW	A 19
WASHER MOTOR	A 35
WIPER CONTROL RELAY	A 35
WIPER MOTOR	E 3
1CA HTR-MIR FUSE	D 50

